

3. Engine Oil

A: INSPECTION

Refer to "LU" section for engine oil inspection. <Ref. to LU(STI)-11, INSPECTION, Engine Oil.> <Ref. to LU(w/o STI)-10, INSPECTION, Engine Oil.>

B: REPLACEMENT

Refer to "LU" section for engine oil replacement. <Ref. to LU(STI)-11, REPLACEMENT, Engine Oil.> <Ref. to LU(w/o STI)-11, REPLACEMENT, Engine Oil.>