


General Description

EXHAUST

1. General Description

A: COMPONENT

1. FRONT EXHAUST PIPE

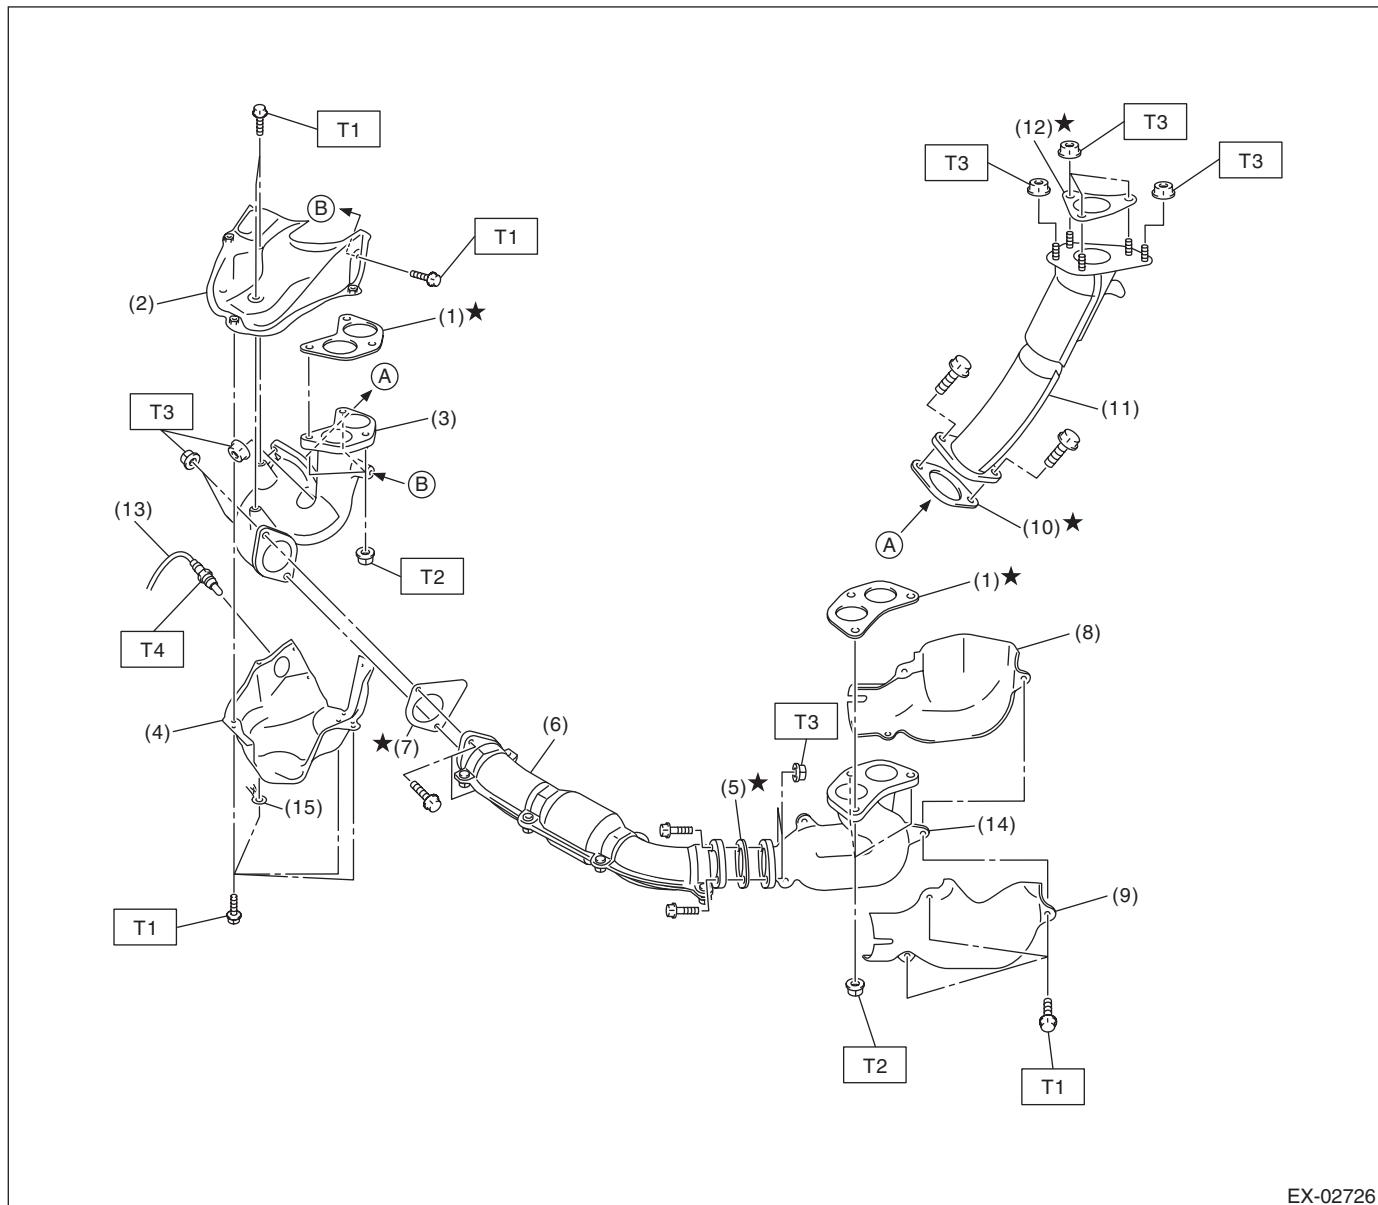

EX-02726

(1) Gasket	(8) Exhaust manifold LH inner cover	(15) Ground cable
(2) Exhaust manifold RH upper cover	(9) Exhaust manifold LH outer cover	
(3) Exhaust manifold RH	(10) Gasket	
(4) Exhaust manifold RH lower cover	(11) Joint pipe	
(5) Gasket	(12) Gasket	
(6) Front exhaust pipe	(13) Front oxygen (A/F) sensor	
(7) Gasket	(14) Exhaust manifold LH	

Tightening torque: N·m (kgf·m, ft·lb)

T1: 19 (1.9, 14.0)

T2: 40 (4.1, 29.5)


T3: 42.5 (4.3, 31.3)

T4: <Ref. to FU(STI)-52, INSTALLATION, Front Oxygen (A/F) Sensor.>

General Description

EXHAUST

2. CENTER AND REAR EXHAUST PIPE, AND MUFFLER

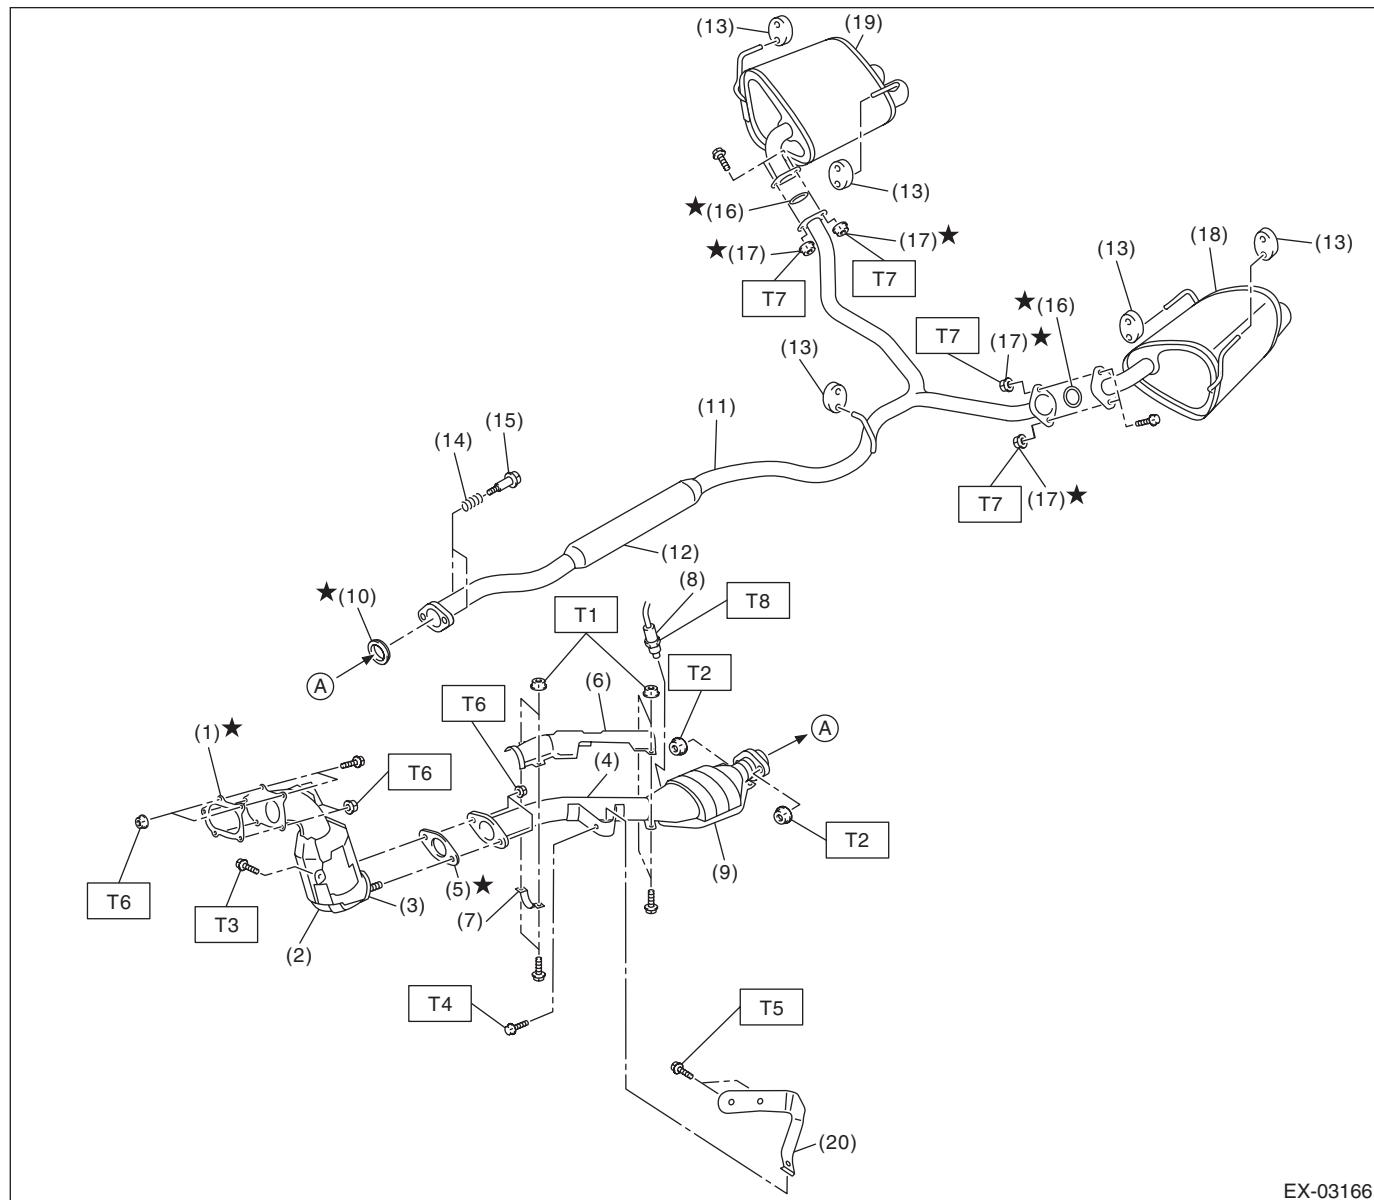

EX-03166

(1) Gasket	(12) Chamber
(2) Front catalytic converter	(13) Cushion rubber
(3) Center exhaust pipe (front)	(14) Spring
(4) Center exhaust pipe (rear)	(15) Bolt
(5) Gasket	(16) Gasket
(6) Center exhaust pipe upper cover	(17) Self-locking nut
(7) Clamp	(18) Muffler LH
(8) Rear oxygen sensor	(19) Muffler RH
(9) Rear catalytic converter	(20) Hanger bracket
(10) Gasket	
(11) Rear exhaust pipe	

Tightening torque: N·m (kgf-m, ft-lb)

T1: 13 (1.3, 9.6)
T2: 18 (1.8, 13.3)
T3: 30 (3.1, 22.1)
T4: 35 (3.6, 25.8)
T5: 40 (4.1, 29.5)
T6: 42.5 (4.3, 31.3)
T7: 48 (4.9, 35.4)
T8: <Ref. to FU(STI)-54, INSTALLATION, Rear Oxygen Sensor.>

General Description

EXHAUST

B: CAUTION

- Prior to starting work, pay special attention to the following:
 1. Always wear work clothes, a work cap, and protective shoes. Additionally, wear a helmet, protective goggles, etc. if necessary.
 2. Protect the vehicle using a seat cover, fender cover, etc.
 3. Prepare the service tools, clean cloth, containers to catch grease and oil, etc.
- Vehicle components are extremely hot immediately after driving. Be wary of receiving burns from heated parts.
- When performing a repair, identify the cause of trouble and avoid unnecessary removal, disassembly and replacement.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from battery.
- Always use the jack-up point when the shop jacks or rigid racks are used to support the vehicle.
- Remove contamination including dirt and corrosion before removal, installation, disassembly or assembly.
- Keep the removed parts in order and protect them from dust and dirt.
- All removed parts, if to be reused, should be reinstalled in the original positions with attention to the correct directions, etc.
- Bolts, nuts and washers should be replaced with new parts as required.
- Be sure to tighten the fasteners including bolts and nuts to the specified torque.
- If any grease adheres to the exhaust pipe, wipe it off. Otherwise a fire may happen.