

4. Engine Oil Filter

A: REPLACEMENT

Refer to "LU" section for engine oil filter replacement. <Ref. to LU(STI)-29, REMOVAL, Engine Oil Filter.>
<Ref. to LU(w/o STI)-53, REMOVAL, Engine Oil Filter.>