


11. Coolant Filler Tank

A: REMOVAL

CAUTION:

The coolant filler tank is pressurized when the engine and radiator are hot. Wait until engine and radiator cool down before working on the coolant filler tank.

- 1) Drain approximately 3.0 L (3.2 US qt, 2.6 Imp qt) of coolant. <Ref. to CO(STI)-13, DRAINING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>
- 2) Disconnect the engine coolant hoses from coolant filler tank.
- 3) Remove the bolt and nut which secure the coolant filler tank.
- 4) Remove the coolant filler tank.

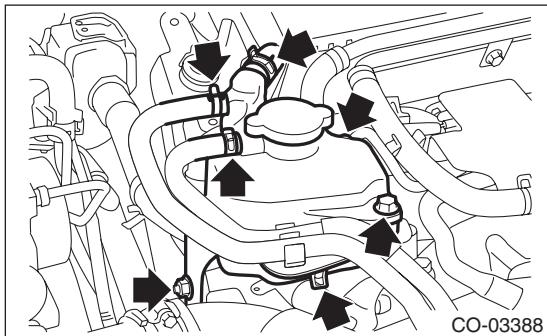


B: INSTALLATION

- 1) Install in the reverse order of removal.

Tightening torque:

T1: 13 N·m (1.3 kgf-m, 9.6 ft-lb)

T2: 16 N·m (1.6 kgf-m, 11.8 ft-lb)

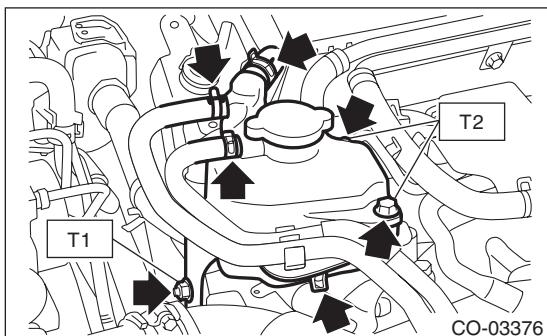

C: INSPECTION

- 1) Check that the coolant filler tank does not have deformation, cracks or damage.
- 2) Check that the engine coolant hose has no cracks, damage or loose part.