

5. Spark Plug

A: REPLACEMENT

Refer to "IG" section for spark plug replacement. <Ref. to IG(STI)-4, REMOVAL, Spark Plug.> <Ref. to IG(w/o STI)-4, REMOVAL, Spark Plug.>