



## 6. Oil Pressure Switch

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the generator from the bracket. <Ref. to SC(STI)-15, REMOVAL, Generator.>
- 3) Disconnect the terminal from oil pressure switch.

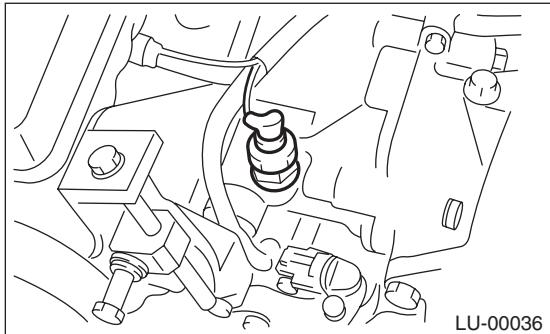

- 4) Remove the oil pressure switch.

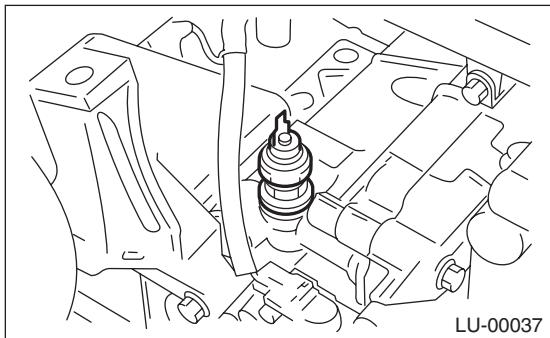


### B: INSTALLATION

- 1) Apply liquid gasket to the oil pressure switch threads.

*Liquid gasket:*


**THREE BOND 1324 (Part No. 004403042) or equivalent**

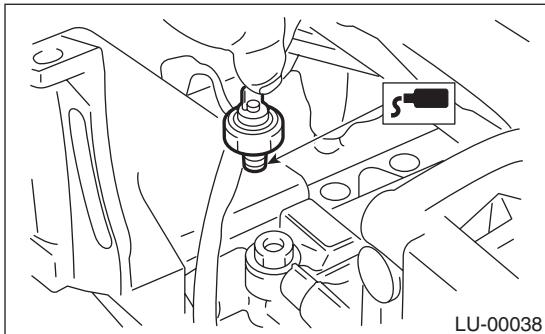


- 2) Install the oil pressure switch to cylinder block.

*Tightening torque:*

**25 N·m (2.5 kgf·m, 18.4 ft-lb)**

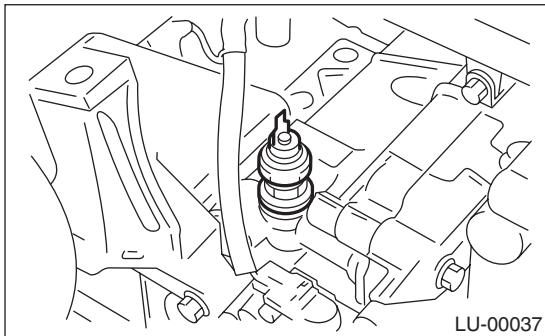

- 3) Connect the terminal to the oil pressure switch.

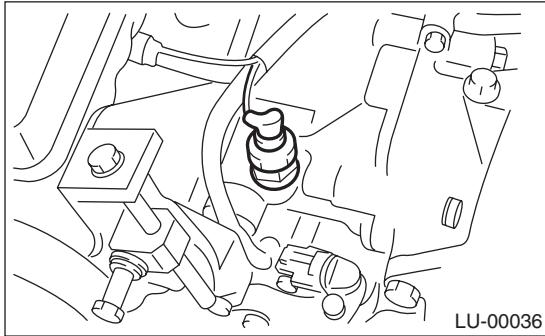

- 4) Install the generator to the bracket. <Ref. to SC(STI)-15, INSTALLATION, Generator.>

- 5) Connect the battery ground terminal.

### C: INSPECTION

- 1) Check that the oil pressure switch does not have deformation, cracks or damage.
- 2) Check that there are no oil leaks or oil oozing from the oil pressure switch installation portion.