

6. V-belt**A: INSPECTION**

Refer to "ME" section for V-belt inspection. <Ref. to ME(STI)-47, INSPECTION, V-belt.> <Ref. to ME(w/o STI)-84, INSPECTION, V-belt.>

B: REPLACEMENT

Refer to "ME" section for V-belt replacement. <Ref. to ME(STI)-41, REMOVAL, V-belt.> <Ref. to ME(w/o STI)-78, REMOVAL, V-belt.>