

9. Fuel Filter

A: REPLACEMENT

For fuel filter replacement procedure, refer to “FU” section. <Ref. to FU(STI)-87, REMOVAL, Fuel Filter.> <Ref. to FU(w/o STI)-183, REMOVAL, Fuel Filter.>

B: INSPECTION

If the filter is clogged, or if the replacement interval has been reached, replace it.