

14. Crankshaft Position Sensor Plate

A: REMOVAL

The crankshaft position sensor plate is tightened together with the drive plate (CVT model) or flywheel (MT model); therefore, refer to "Drive Plate" or "Flywheel" for removal procedure. <Ref. to CVT(TR690)-137, REMOVAL, Drive Plate.> <Ref. to CL-15, REMOVAL, Flywheel.>

B: INSTALLATION

The crankshaft position sensor plate is tightened together with the drive plate (CVT model) or flywheel (MT model); therefore, refer to "Drive Plate" or "Flywheel" for installation procedure. <Ref. to CVT(TR690)-138, INSTALLATION, Drive Plate.> <Ref. to CL-15, INSTALLATION, Flywheel.>

C: INSPECTION

Check that the crankshaft position sensor plate has no deformation, cracks or other damages.