


30. Fuel Injector Relay

A: REMOVAL

- 1) Disconnect the ground terminal from battery sensor. <Ref. to NT-5, BATTERY, NOTE, Note.>
- 2) Remove the fuel injector relay from main fuse box.

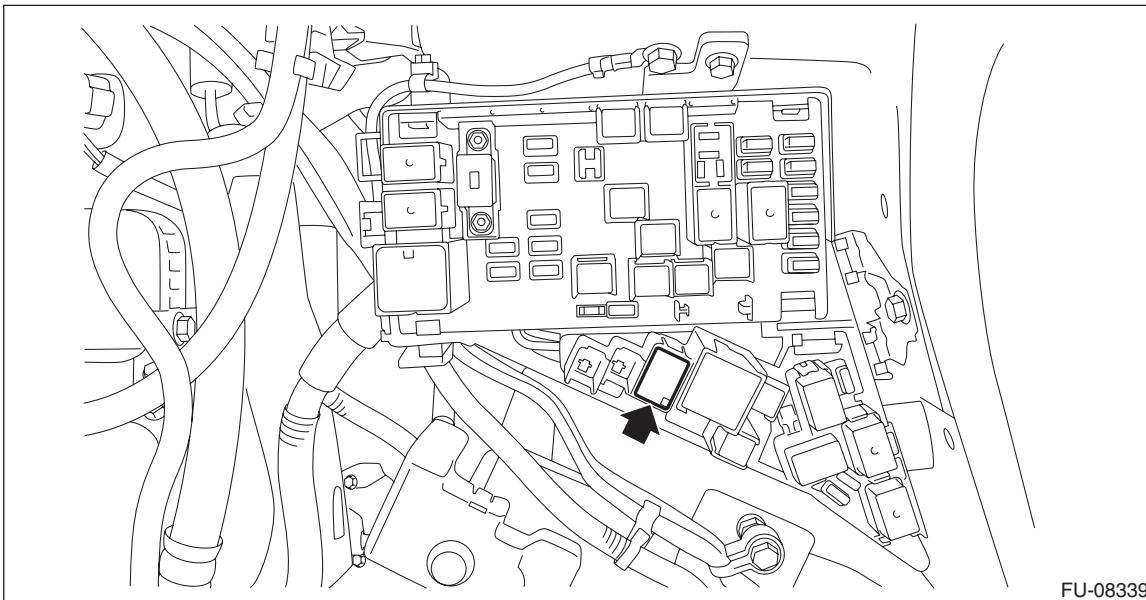


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Check that the fuel injector relay has no deformation, cracks or other damages.
- 2) Measure the resistance between fuel injector relay terminals.

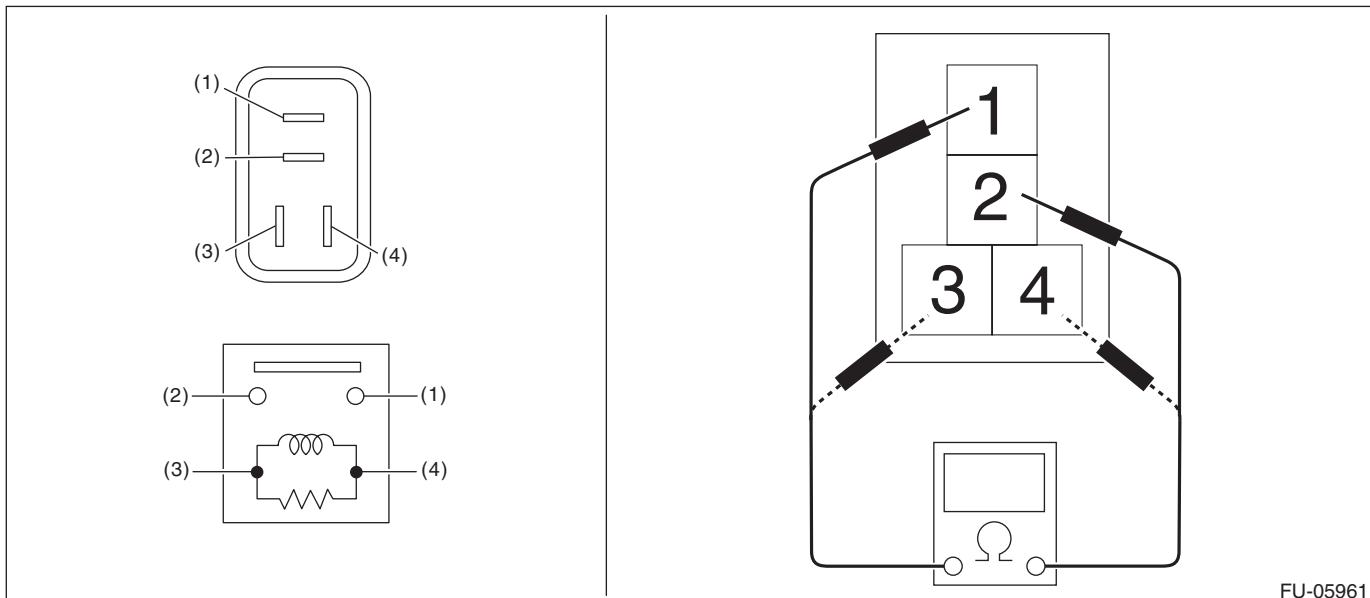


Terminal No.	Standard
1 and 2	1 MΩ or more
3 and 4	93.8 — 136.4 Ω (when 20°C (68°F))

Fuel Injector Relay

FUEL INJECTION (FUEL SYSTEMS)

3) Connect battery positive terminal to terminal No. 3 and battery ground terminal to terminal No. 4, and measure the resistance between the fuel injector relay terminals.

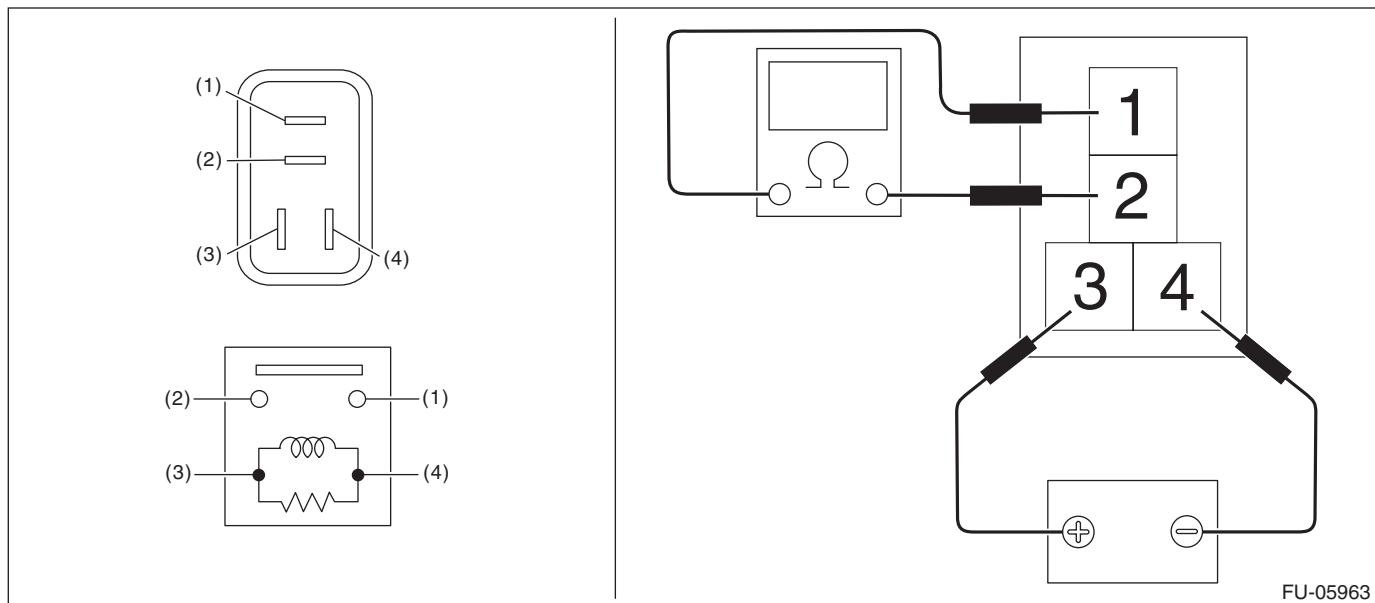

FU-05963

Terminal No.	Standard
1 and 2	Less than 1 Ω