

Front Catalytic Converter

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

2. Front Catalytic Converter

A: REMOVAL

The front catalytic converter is integrated into the center exhaust pipe (front). Refer to "Center Exhaust Pipe" for removal procedures. <Ref. to EX(w/o STI)-35, REMOVAL, Center Exhaust Pipe.>

B: INSTALLATION

The front catalytic converter is integrated into the center exhaust pipe (front). Refer to "Center Exhaust Pipe" for installation procedures. <Ref. to EX(w/o STI)-41, INSTALLATION, Center Exhaust Pipe.>

C: INSPECTION

- 1) Check the connections and welded parts for exhaust leaks.
- 2) Make sure there are no holes or rusting.