

PCV Connector


EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

14. PCV Connector

A: REMOVAL

1) Remove the collector cover.

- (1) Remove the clips (A).
- (2) Hold the shaded area (B) by hand and carefully pull the RH side (C) upward.
- (3) Hold the shaded area (D) by hand and carefully pull the LH side (E) upward.

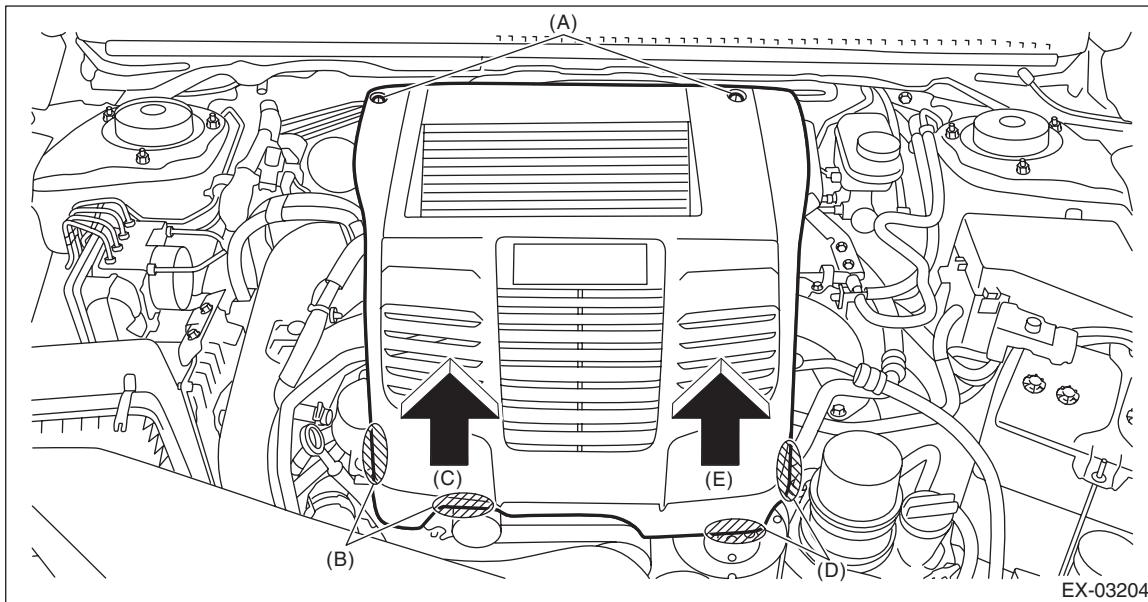


2) Collect the refrigerant from A/C system. <Ref. to AC-26, Refrigerant Recovery Procedure.>

3) Disconnect the ground terminal from battery sensor. <Ref. to NT-5, BATTERY, NOTE, Note.>

4) Drain engine coolant. <Ref. to CO(w/o STI)-13, DRAINING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>

5) Remove the A/C compressor. <Ref. to AC-45, REMOVAL, Compressor.>

6) Disconnect the preheater hose and PCV pipe from the PCV connector, and remove the PCV connector from the cylinder block LH.

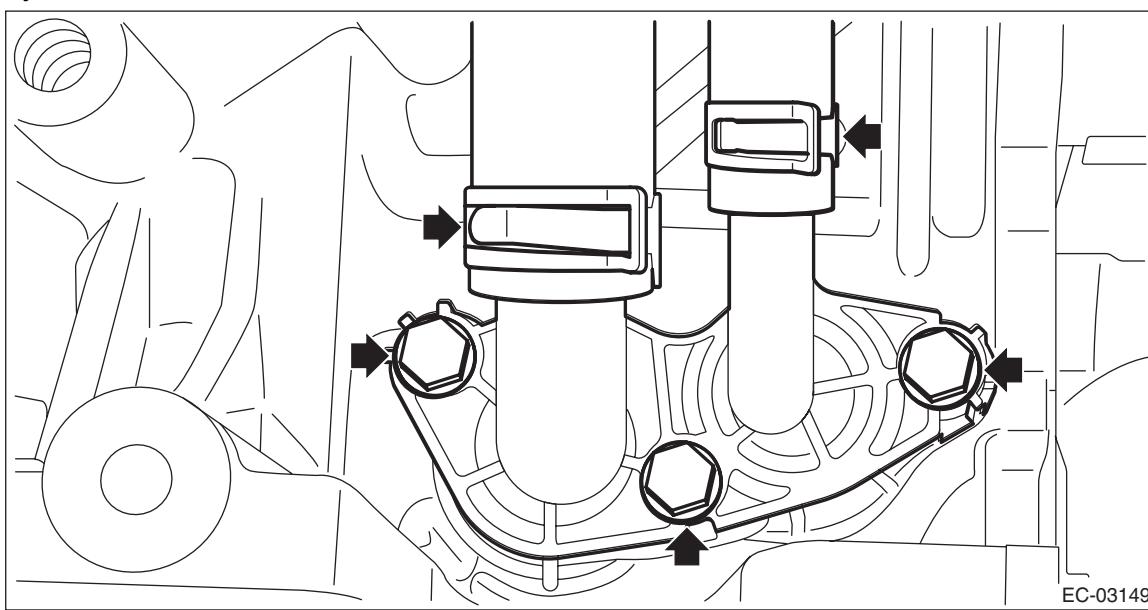

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Use new O-rings.

Tightening torque:

6.4 N·m (0.7 kgf-m, 4.7 ft-lb)

C: INSPECTION

Check that the PCV connector has no deformation, cracks or other damages.