

15.CVTF

A: INSPECTION

Refer to "CVT (TR690)" section for CVTF inspection. <Ref. to CVT(TR690)-36, INSPECTION, CVTF.>

B: REPLACEMENT

Refer to "CVT (TR690)" section for CVTF replacement. <Ref. to CVT(TR690)-38, REPLACEMENT, CVTF.>