



## 2. Air Cleaner Element

### A: REMOVAL

- 1) Remove the clip (A) from the air cleaner case (rear).

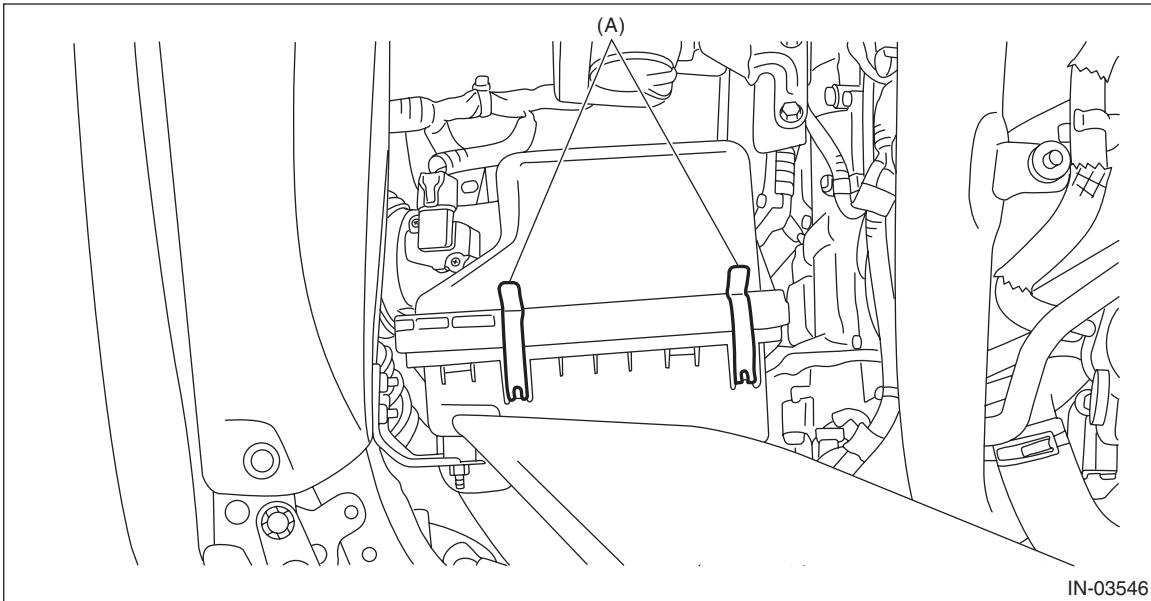

- 2) Open the air cleaner case (rear) while lifting it up, and remove the protrusion of the air cleaner case (rear) from the hole on the air cleaner case (front) to remove the air cleaner element.

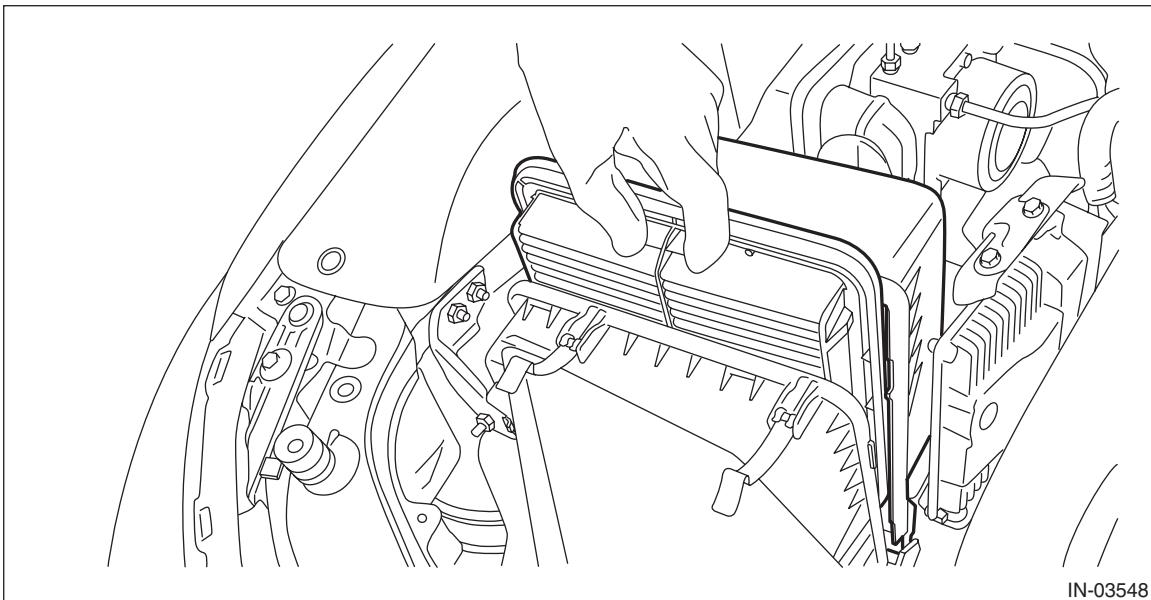

# Air Cleaner Element


## INTAKE (INDUCTION)

### B: INSTALLATION

Install in the reverse order of removal.

#### NOTE:

- Be sure to use SUBARU genuine air cleaner element depending on the engine type when replacing the air cleaner elements. Using other air cleaner element may affect the engine performance.
- Check that there are no foreign objects in the air cleaner case.
- When setting the air cleaner case (rear), align the protrusion of the air cleaner case (rear) to the air cleaner case (front) to insert.

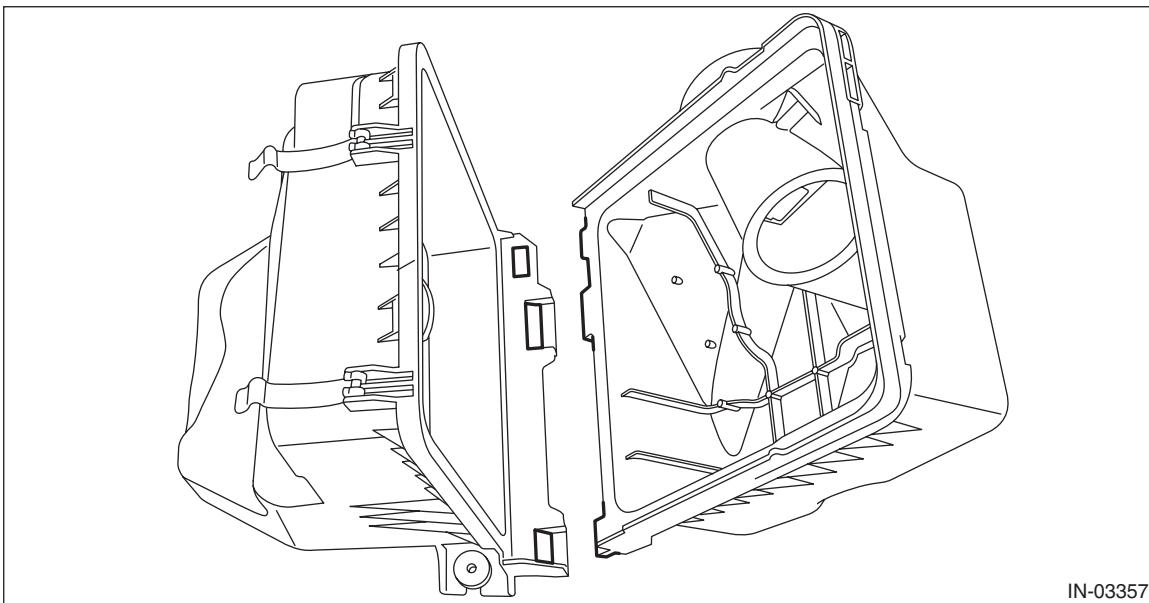

### C: INSPECTION

- 1) Check that the air cleaner element has no deformation, cracks or other damages.
- 2) Check the air cleaner element for excessive dirt.