

## 10. Scavenge Pump

### A: REMOVAL

Refer to "Scavenge Pump" for removal procedure of scavenge pump. <Ref. to LU(w/o STI)-43, REMOVAL, Scavenge Pump.>

### B: INSTALLATION

Refer to "Scavenge Pump" for installation procedure of scavenge pump. <Ref. to LU(w/o STI)-44, INSTALLATION, Scavenge Pump.>

### C: INSPECTION

Refer to "Scavenge Pump" for inspection procedure of scavenge pump. <Ref. to LU(w/o STI)-44, INSPECTION, Scavenge Pump.>