

## 16. Front & Rear Differential Gear Oil

### A: INSPECTION

#### 1. FRONT DIFFERENTIAL (MT MODEL)

Front differential gear oil of MT model lubricates the transmission and differential together. Refer to "6MT (TY75)" or "6MT (TY85)" section for inspection. <Ref. to 6MT(TY75)-23, INSPECTION, Transmission Gear Oil.> <Ref. to 6MT(TY85)-26, INSPECTION, Transmission Gear Oil.>

#### 2. FRONT DIFFERENTIAL (CVT MODEL)

Refer to "CVT (TR690)" section for inspection of CVT model front differential gear oil. <Ref. to CVT(TR690)-41, INSPECTION, Differential Gear Oil.>

#### 3. REAR DIFFERENTIAL

Refer to "DI" section for rear differential gear oil inspection. <Ref. to DI-16, INSPECTION, Differential Gear Oil.>

### B: REPLACEMENT

#### 1. FRONT DIFFERENTIAL (MT MODEL)

Front differential gear oil of MT model lubricates the transmission and differential together. Refer to "6MT (TY75)" or "6MT (TY85)" section for replacement. <Ref. to 6MT(TY75)-24, REPLACEMENT, Transmission Gear Oil.> <Ref. to 6MT(TY85)-26, REPLACEMENT, Transmission Gear Oil.>

#### 2. FRONT DIFFERENTIAL (CVT MODEL)

Refer to "CVT (TR690)" section for front differential gear oil replacement. <Ref. to CVT(TR690)-42, REPLACEMENT, Differential Gear Oil.>

#### 3. REAR DIFFERENTIAL

Refer to "DI" section for rear differential gear oil replacement. <Ref. to DI-16, REPLACEMENT, Differential Gear Oil.>