

12. Resonator Chamber

A: REMOVAL

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for removal procedure. <Ref. to IN(w/o STI)-9, REMOVAL, Air Cleaner Case.>

B: INSTALLATION

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for installation procedure. <Ref. to IN(w/o STI)-12, INSTALLATION, Air Cleaner Case.>

C: INSPECTION

Check that the resonator chamber has no deformation, cracks or other damages.

MECHANICAL

ME(w/o STI)

	Page
1. General Description	2
2. Compression	23
3. Idle Speed	26
4. Ignition Timing	27
5. Intake Manifold Vacuum	28
6. Engine Oil Pressure	30
7. Fuel Pressure	31
8. Cam Clearance	36
9. Engine Assembly	48
10. Engine Mounting	76
11. Preparation for Overhaul	77
12. V-belt	78
13. Crank Pulley	85
14. Chain Cover	93
15. Timing Chain Assembly	116
16. Cam Sprocket	141
17. Crank Sprocket	150
18. Rocker Cover	152
19. Camshaft	171
20. Cam Carrier	172
21. Cylinder Head	215
22. Cylinder Block	260
23. Intake and Exhaust Valve	348
24. Piston	349
25. Connecting Rod	350
26. Crankshaft	351
27. Engine Trouble in General	352
28. Engine Noise	358