



## 9. Radiator Main Fan and Fan Motor

### A: REMOVAL

- 1) Disconnect the ground terminal from battery sensor. <Ref. to NT-5, BATTERY, NOTE, Note.>
- 2) Remove the reservoir tank. <Ref. to CO(w/o STI)-52, REMOVAL, Reservoir Tank.>
- 3) Disconnect the connector from the main fan motor.

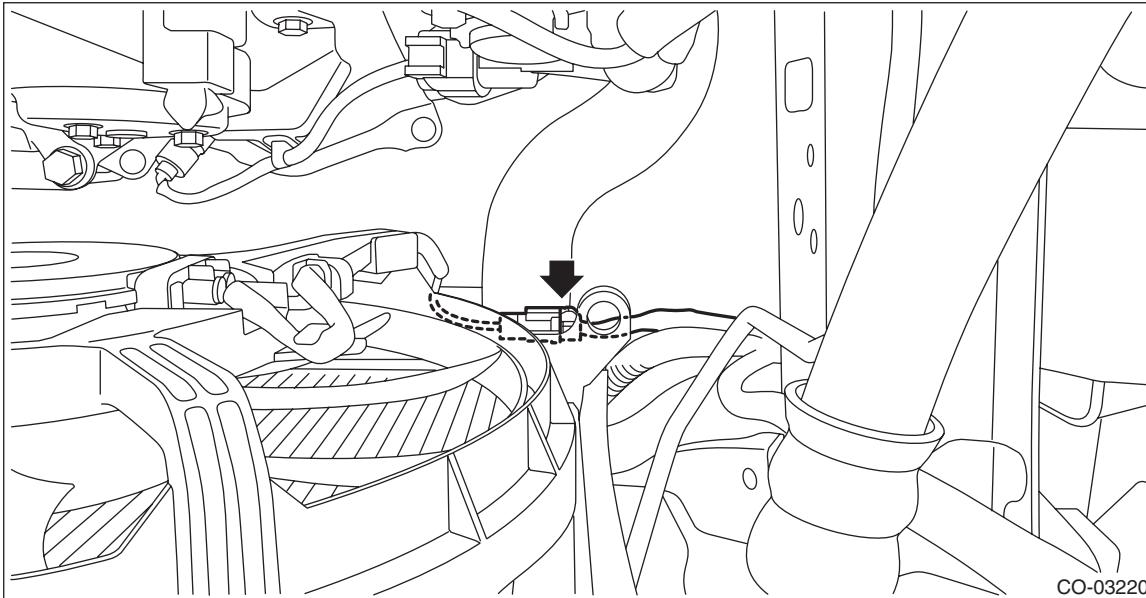

- 4) Remove the bolts which secure the radiator main fan motor assembly onto the radiator.

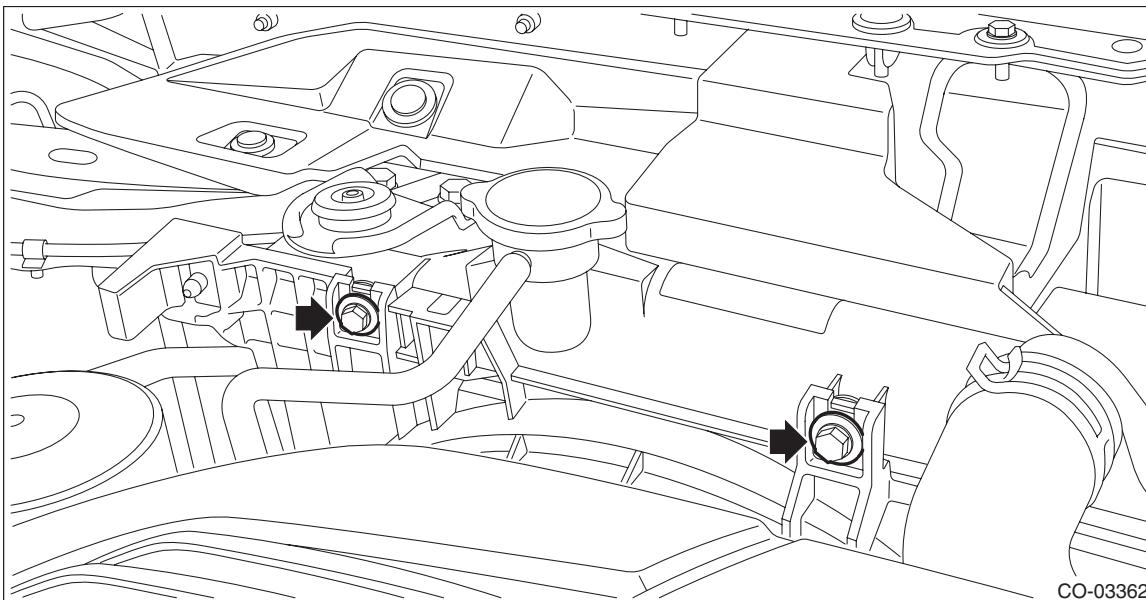

- 5) Remove the radiator main fan motor assembly from the vehicle.

### B: INSTALLATION

Install in the reverse order of removal.

**CAUTION:**


Confirm that the radiator hose is securely connected.

**Tightening torque:**


7.5 N·m (0.8 kgf·m, 5.5 ft-lb)

### C: DISASSEMBLY

- 1) Remove the clip which holds the main fan motor connector onto the radiator main fan shroud.
- 2) Disconnect the radiator main fan from the main fan motor.

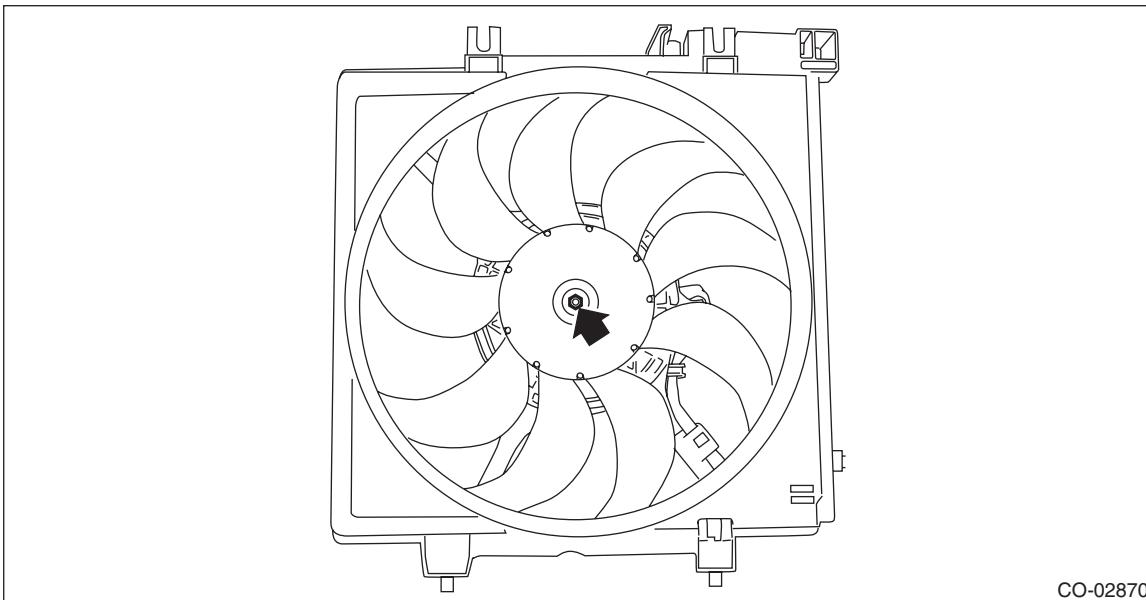

- 3) Disconnect the main fan motor from the radiator main fan shroud.

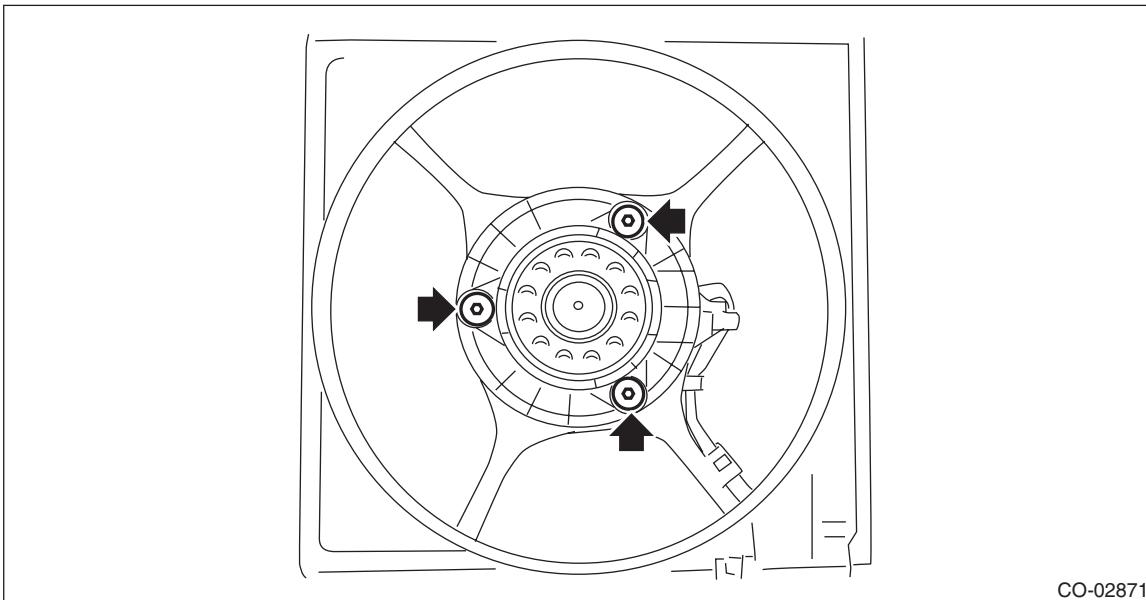

# Radiator Main Fan and Fan Motor


## COOLING

### D: ASSEMBLY

Assemble in the reverse order of disassembly.


**Tightening torque:**

4.41 N·m (0.45 kgf·m, 3.25 ft-lb)

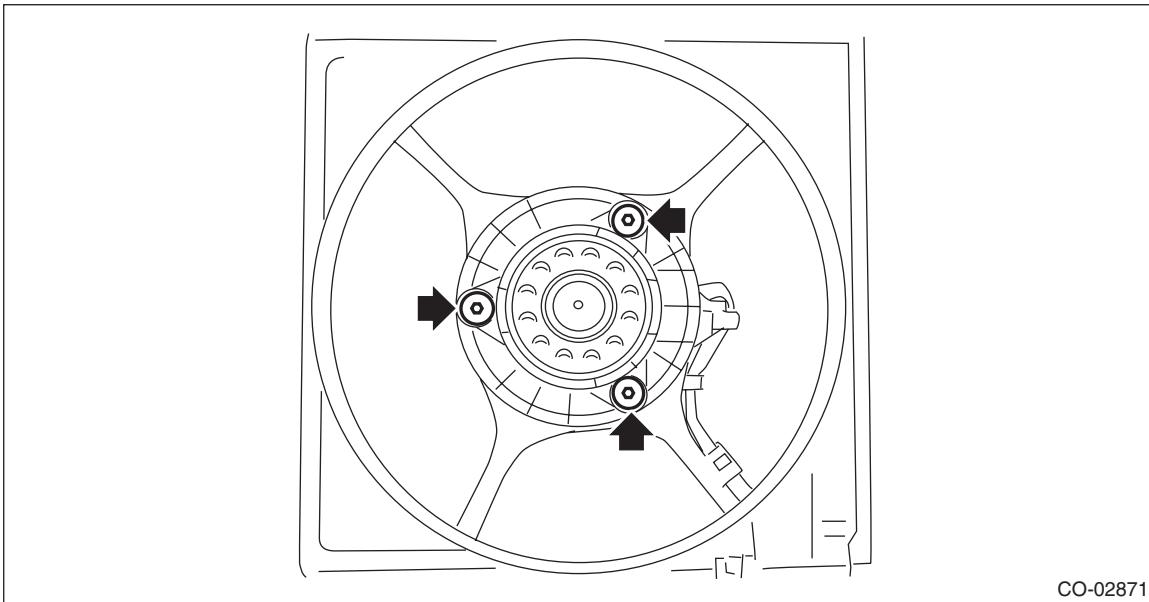

**Tightening torque:**

3.4 N·m (0.3 kgf·m, 2.5 ft-lb)

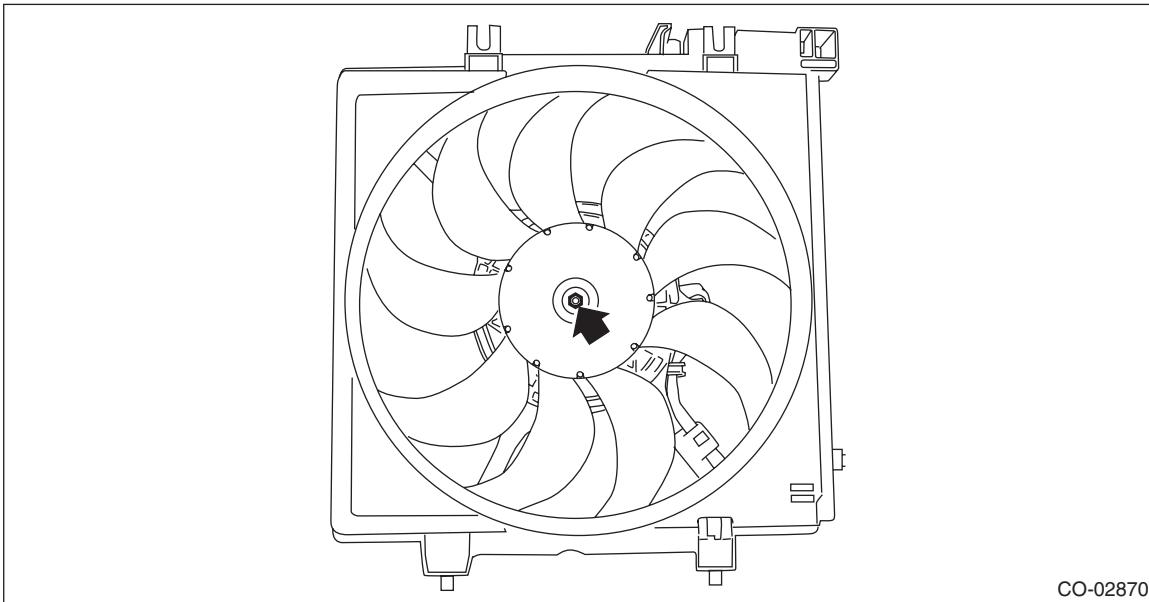

### E: INSPECTION

Check that the radiator main fan, radiator main fan shroud and main fan motor do not have deformation, cracks or damage.