


10. Radiator Sub Fan and Fan Motor


A: REMOVAL

- 1) Disconnect the ground terminal from battery sensor. <Ref. to NT-5, BATTERY, NOTE, Note.>
- 2) Remove the air intake duct. <Ref. to IN(w/o STI)-22, REMOVAL, Air Intake Duct.>
- 3) Disconnect the connector from the sub fan motor.

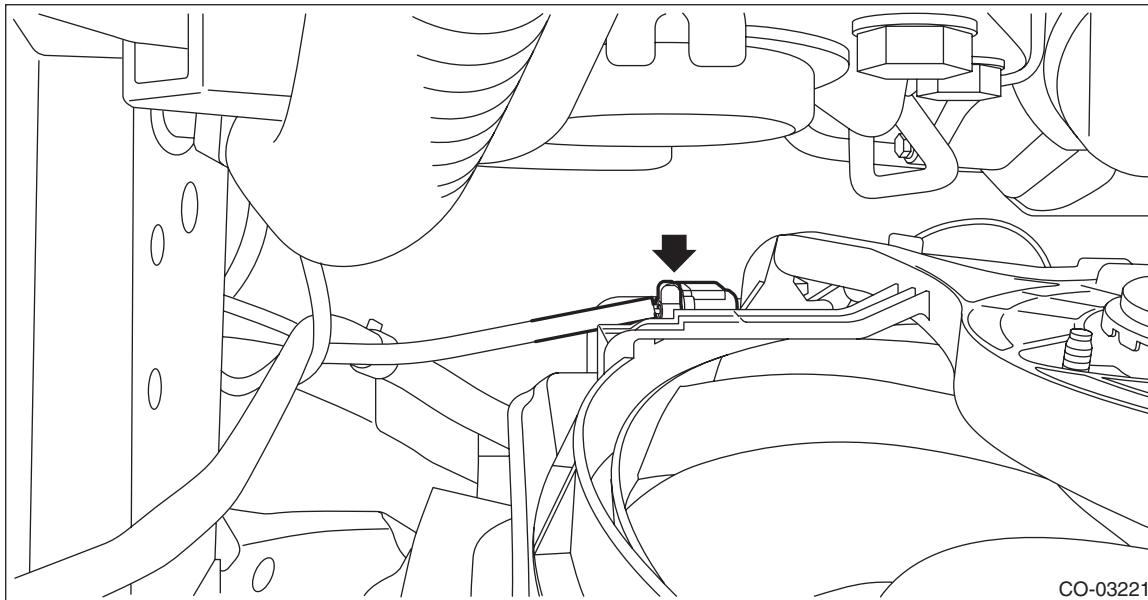

CO-03221

- 4) Remove the bolts which secure the radiator sub fan motor assembly onto the radiator.

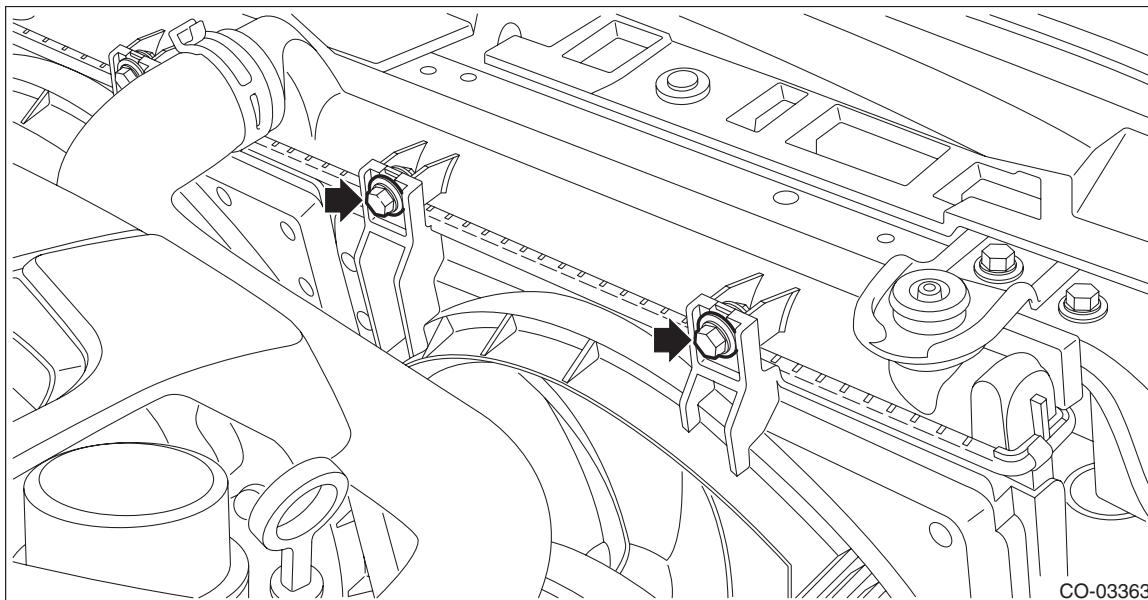

CO-03363

- 5) Remove the radiator sub fan motor assembly from the vehicle.

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

Confirm that the radiator hose is securely connected.

Tightening torque:


7.5 N·m (0.8 kgf·m, 5.5 ft-lb)

D: ASSEMBLY

Assemble in the reverse order of disassembly.

Tightening torque:


4.41 N·m (0.45 kgf-m, 3.25 ft-lb)

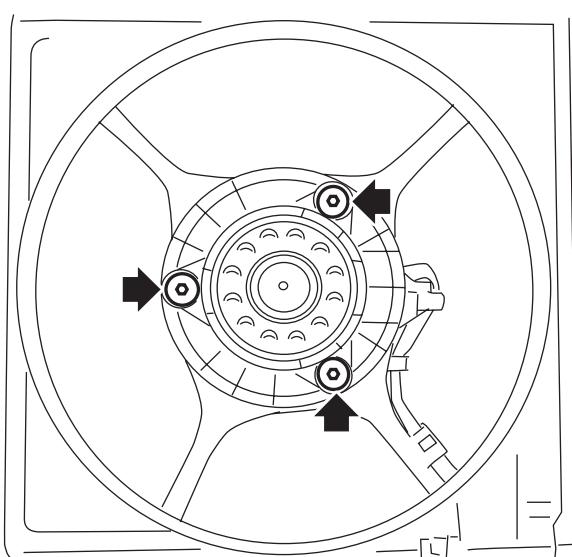

CO-02871

Tightening torque:

3.4 N·m (0.3 kgf-m, 2.5 ft-lb)

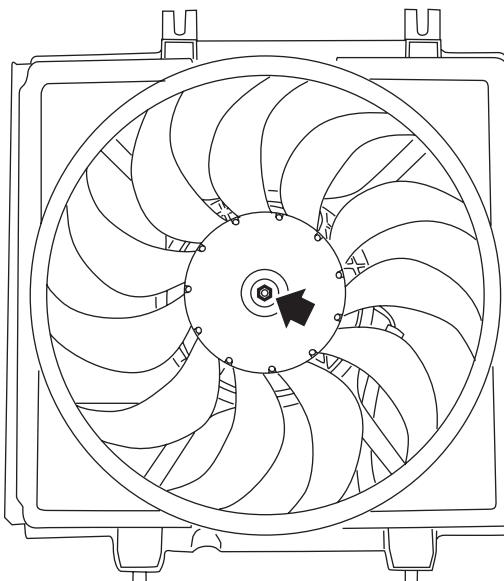

CO-03079

E: INSPECTION

Check that the radiator sub fan, radiator sub fan shroud and sub fan motor do not have deformation, cracks or damage.