

## 12. Extension Case Oil Seal

### A: INSPECTION


Check for leakage of CVTF from the joint section of transmission and propeller shaft. If a leak is found, inspect the propeller shaft and replace the oil seal.

### B: REPLACEMENT

#### CAUTION:

**Immediately after the vehicle has been running or after idling for a long time, the differential gear oil will be hot. Be careful not to burn yourself.**

- 1) Lift up the vehicle.
- 2) Clean the transmission exterior.
- 3) Remove the center exhaust pipe (rear). <Ref. to EX(w/o STI)-35, REMOVAL, Center Exhaust Pipe.>
- 4) Remove the center exhaust cover.

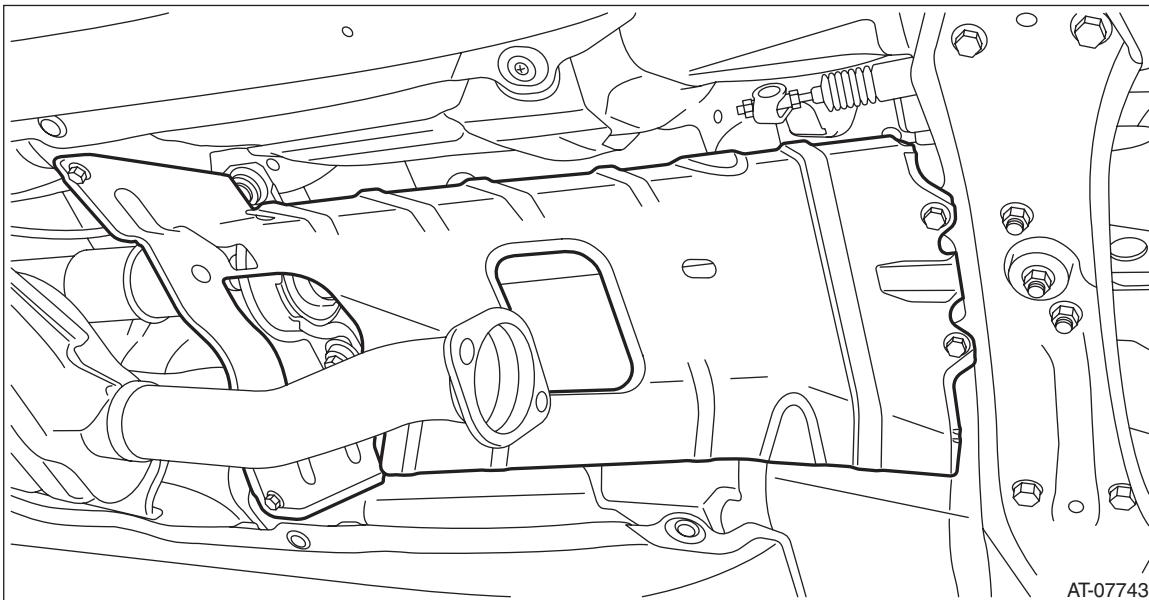

- 5) Remove the propeller shaft. <Ref. to DS-12, REMOVAL, Propeller Shaft.>
- 6) Using a screwdriver or ST, remove the oil seal trying not to damage the extension case.  
ST 398527700 PULLER ASSY
- 7) Using the ST, install the oil seal.

#### NOTE:

Use a new oil seal.

ST 498057300 OIL SEAL DRIFT


## Extension Case Oil Seal

### CONTINUOUSLY VARIABLE TRANSMISSION

- 8) Install the propeller shaft. <Ref. to DS-14, INSTALLATION, Propeller Shaft.>
- 9) Install the center exhaust cover.

**Tightening torque:**

**18 N·m (1.8 kgf·m, 13.3 ft-lb)**

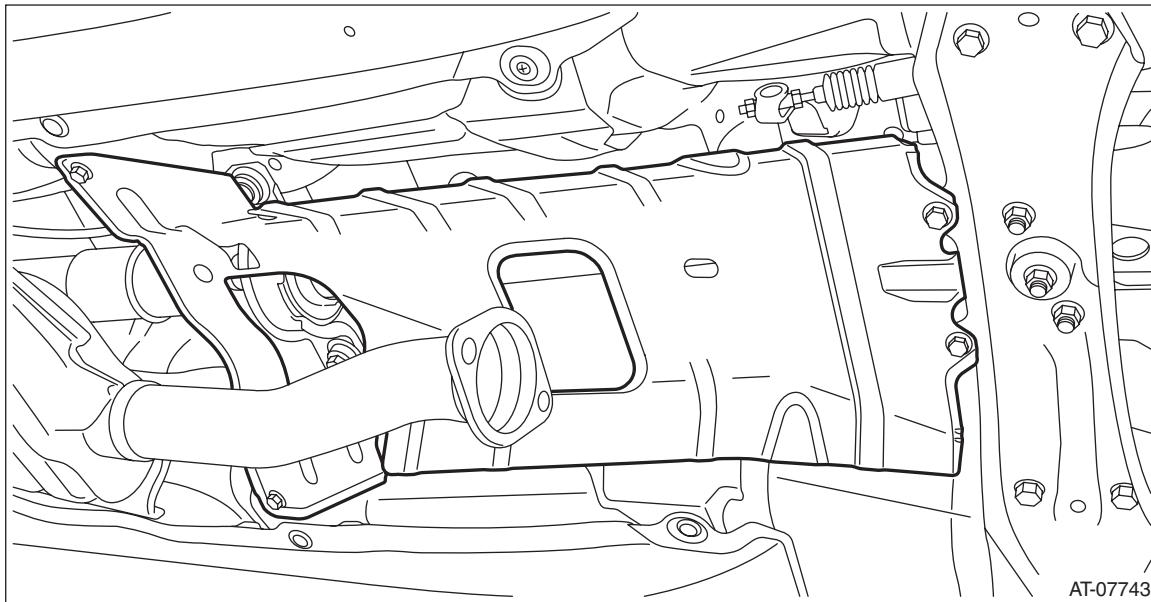

- 10) Install the center exhaust pipe (rear). <Ref. to EX(w/o STI)-41, INSTALLATION, Center Exhaust Pipe.>
- 11) Adjust the CVTF level and check there is no leakage. <Ref. to CVT(TR690)-36, ADJUSTMENT, CVTF.>