



## 24. Air Breather Hose

### A: REMOVAL

- 1) Remove the intercooler. <Ref. to IN(w/o STI)-38, REMOVAL, Intercooler.>
- 2) Remove the two air breather hoses.

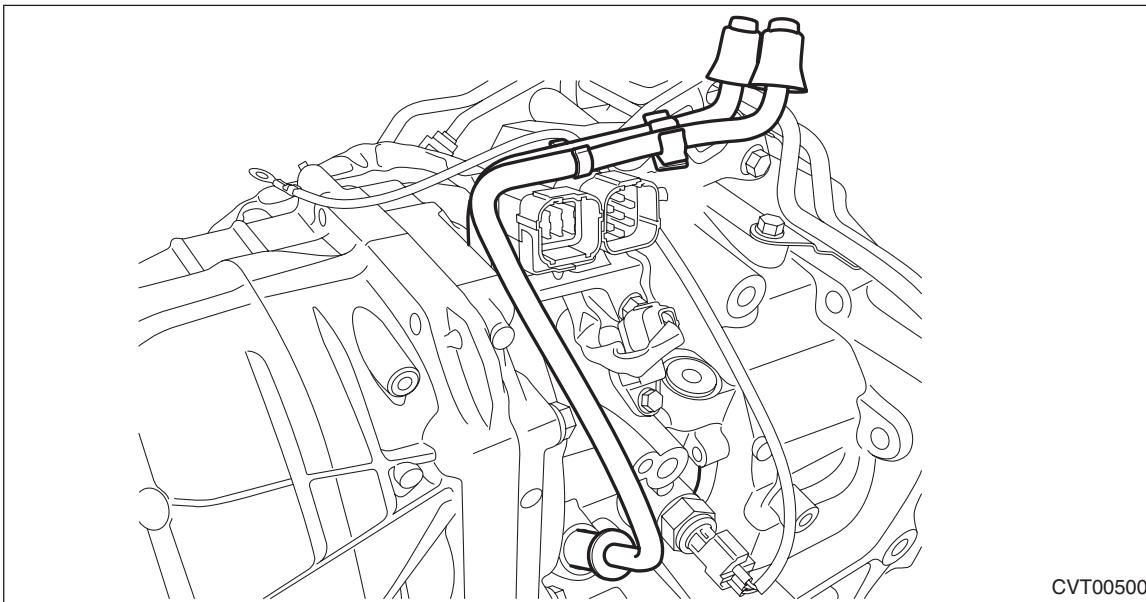

- 3) Remove the air breather cap.
- 4) Remove the oil cap.

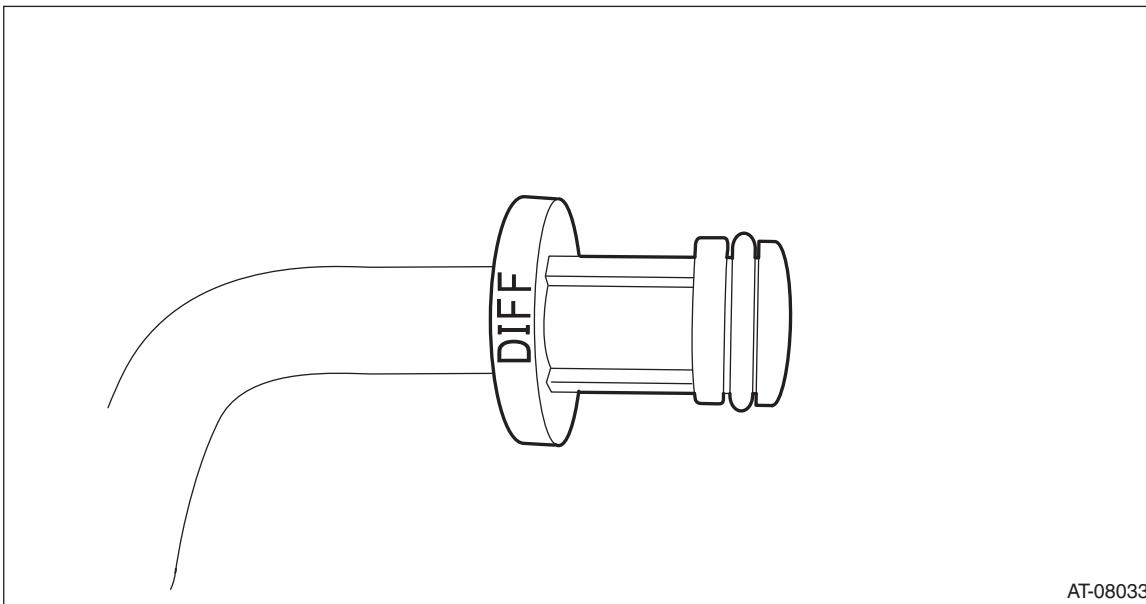

### B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Use new O-rings.

### C: INSPECTION

- Check the hose for peeling, crack or clogging.
- Check the oil cap is not cracked or clogged.
- Check O-ring of oil cap is not damaged.