

35. CVTF Filter

A: REMOVAL

NOTE:

- Although CVTF filter is a maintenance-free part, replace it if a large quantity of wear debris and metal particles are found in CVTF and CVTF filter.
- For removal of CVTF filter, refer to “Intermediate Case”. <Ref. to CVT(TR690)-165, REMOVAL, Intermediate Case.>

B: INSTALLATION

NOTE:

For installation of CVTF filter, refer to “Intermediate Case”. <Ref. to CVT(TR690)-166, INSTALLATION, Intermediate Case.>

C: INSPECTION

- Check if a large quantity of wear debris or metal particles are in CVTF and CVTF filter.
- Check for broken part or damaged O-ring.