


Electrical Component Location

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION


1. CONTROL MODULE

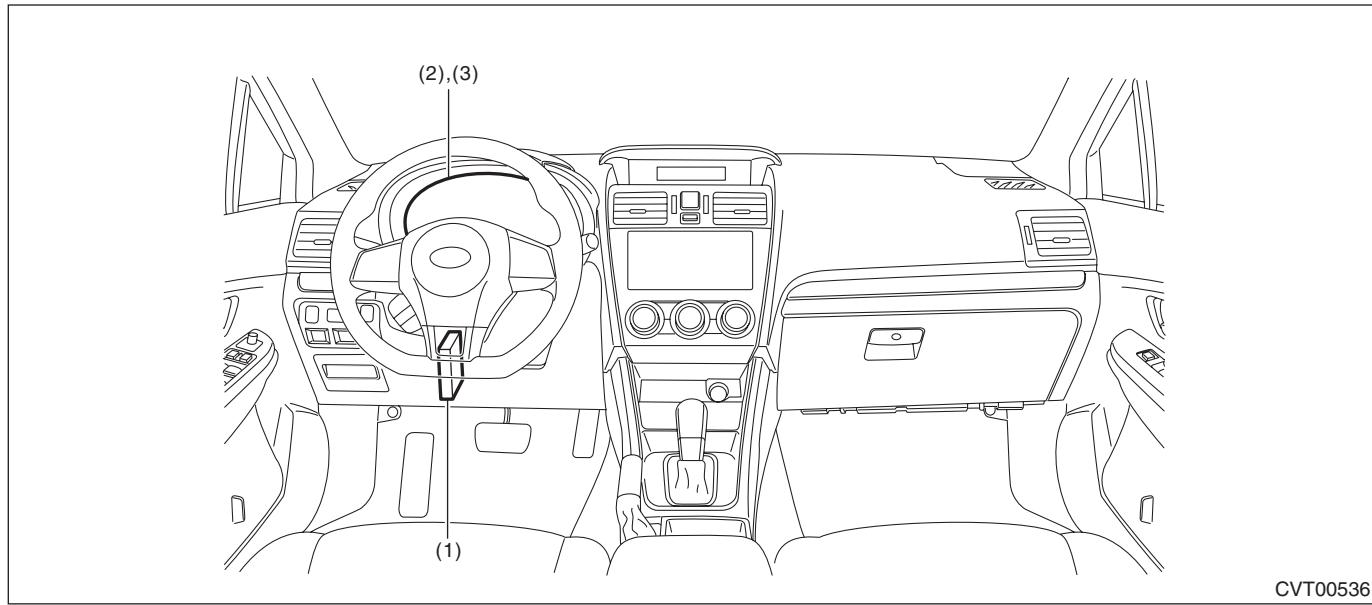

(1) Transmission control module
(TCM)

(2) AWD light


(3) AT OIL TEMP light

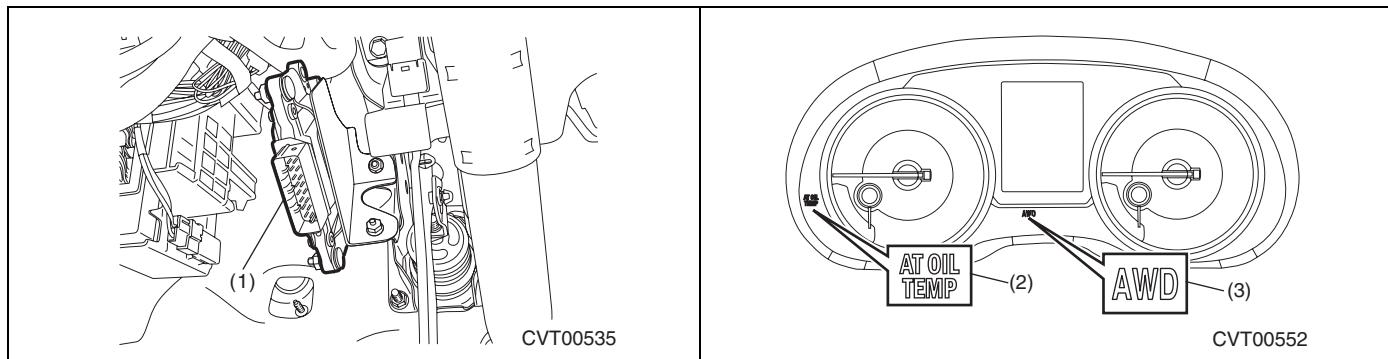

Electrical Component Location

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

2. SENSOR

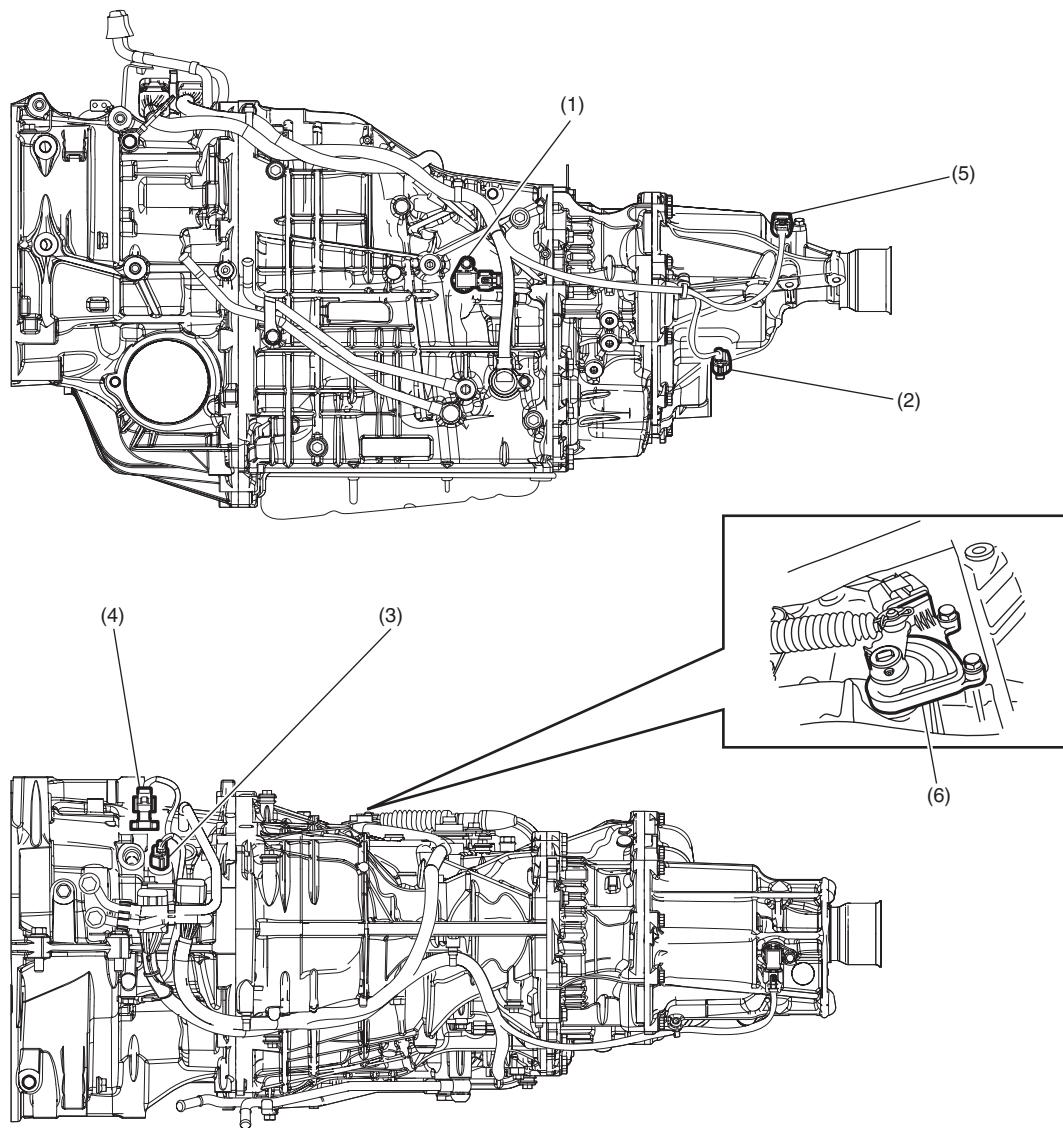


CVT00539

(1) Secondary speed sensor	(3) Primary speed sensor	(5) Rear wheel speed sensor
(2) Front wheel speed sensor	(4) Secondary pressure sensor	(6) Inhibitor switch

Electrical Component Location

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

3. SOLENOID

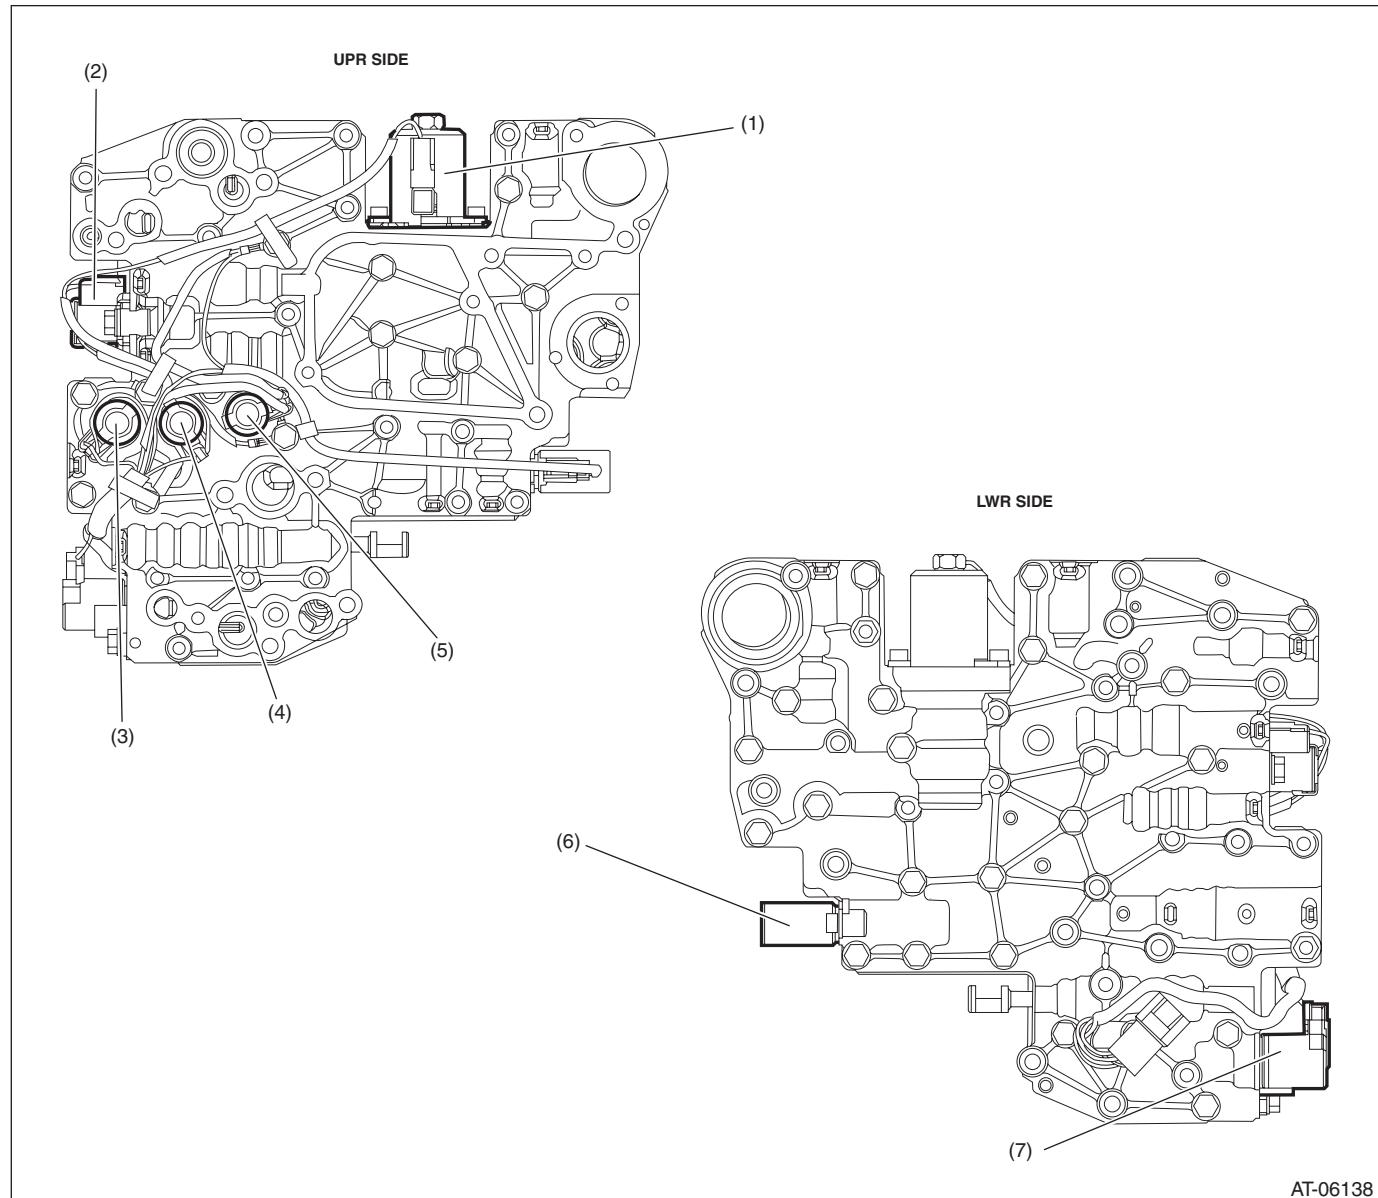

- (1) Secondary solenoid
- (2) AWD solenoid
- (3) Lock-up duty solenoid

- (4) Primary DOWN solenoid
- (5) Primary UP solenoid

- (6) F&R solenoid
- (7) Lock-up ON/OFF solenoid