

System Operation Check Mode

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

11. System Operation Check Mode

A: OPERATION

CAUTION:

- Make sure that the system operation check mode is performed when the engine is not running.
- After executing the system operation check mode, execute the Clear Memory Mode.

- 1) On «Main Menu» display, select {Each System Check}.
- 2) On «System Selection Menu» display, select {Transmission Control System}.
- 3) Select {Work Support} in the «Transmission Control System» display.
- 4) On «Work Support» display, select {System Operation Check Mode}.

NOTE:

For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.

Item	SSM display
Actuator ON/OFF Operation	F&R Clutch Solenoid
	Secondary Solenoid
	Primary Down Solenoid
	Primary Up Solenoid
	AWD Solenoid
	Lock-Up Duty Solenoid
	Lock-up ON/OFF Solenoid