

## 7. Driver's Control Center Differential Control Module

### A: REMOVAL

For removal of driver's control center differential control module, refer to the "FU(STI)" section.  
<Ref. to FU(STI)-56, REMOVAL, Engine Control Module (ECM).>

### B: INSTALLATION

For installation of driver's control center differential control module, refer to the "FU(STI)" section.  
<Ref. to FU(STI)-56, INSTALLATION, Engine Control Module (ECM).>