


10. Air Breather Hose

A: REMOVAL

- 1) Remove the intercooler. <Ref. to IN(STI)-13, REMOVAL, Intercooler.>
- 2) Remove the air breather hose.

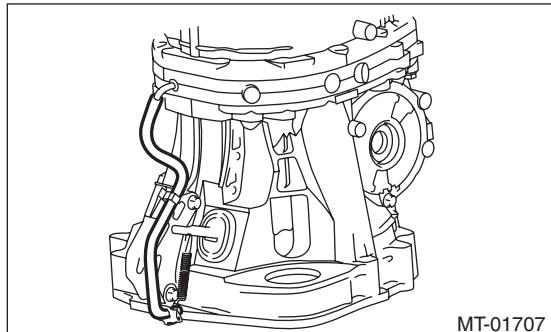

B: INSTALLATION

- 1) Install the air breather hose.
- 2) Install the intercooler. <Ref. to IN(STI)-14, INSTALLATION, Intercooler.>

C: INSPECTION

Make sure the hose is not cracked or clogged.