

# Basic Diagnostic Procedure

## MANUAL TRANSMISSION AND DIFFERENTIAL (DIAGNOSTICS)

### 1. Basic Diagnostic Procedure

#### A: PROCEDURE

| Step  | Check  | Yes  | No   |
|---|--|--|--|
| <b>1 START INSPECTIONS.</b><br>1) Use the Check List for Interview to confirm the condition of the problem from the user.<br><Ref. to 6MT(diag)-3, Check List for Interview.><br>2) Check the items related to DCCD. <ul style="list-style-type: none"><li>• General inspection &lt;Ref. to 6MT(diag)-4, INSPECTION, General Description.&gt;</li><li>• Disconnection of harness connector</li><li>• Visual check for harness connector damage</li><li>• Oil leakage</li></ul>    | Are items related DCCD OK?                           | Go to step <b>2</b> .  | Repair the defective items.  |
| <b>2 CHECK DTC.</b><br>Read the DTC. <Ref. to 6MT(diag)-7, Subaru Select Monitor.><br><br>NOTE: <ul style="list-style-type: none"><li>• Refer to "List of Diagnostic Trouble Code (DTC)" for DTC. &lt;Ref. to 6MT(diag)-18, List of Diagnostic Trouble Code (DTC).&gt;</li><li>• If the communication function of Subaru Select Monitor cannot be executed normally, check the communication circuit. &lt;Ref. to 6MT(diag)-7, Subaru Select Monitor.&gt;</li></ul>               | Are DTC, time stamp and freeze frame data displayed? | Record the DTC, time stamp and freeze frame data. Go to step <b>3</b> .<br><br>NOTE: <ul style="list-style-type: none"><li>• For the time stamp, refer to LAN section. &lt;Ref. to LAN(diag)-6, TIME STAMP, CAUTION, General Description.&gt;</li><li>• Depending on DTCs, time stamp may not be stored.</li></ul> | Inspect based on the general diagnosis table. <Ref. to 6MT(diag)-33, Diagnostics with Phenomenon.> |
| <b>3 PERFORM DIAGNOSIS.</b><br>1) Inspect and repair all DTC using the "Diagnostic Procedure with Diagnostic Trouble Code (DTC)". <Ref. to 6MT(diag)-19, Diagnostic Procedure with Diagnostic Trouble Code (DTC).><br><br>NOTE:<br>Refer to "List of Diagnostic Trouble Code (DTC)" for DTC. <Ref. to 6MT(diag)-18, List of Diagnostic Trouble Code (DTC).><br>2) Start the engine.<br>3) Read the DTC using Subaru Select Monitor. <Ref. to 6MT(diag)-7, Subaru Select Monitor.> | Is DTC displayed?                                    | Record all DTC using the "Diagnostic Procedure with Diagnostic Trouble Code (DTC)" for the inspection. <Ref. to 6MT(diag)-19, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> Repeat execute diagnosis until DTC no longer appears.  | Inspect based on the general diagnosis table. <Ref. to 6MT(diag)-33, Diagnostics with Phenomenon.> |