

11. Clutch Switch

A: REMOVAL

1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

- 2) Remove the instrument panel lower cover.
- 3) Disconnect the connector from the clutch switch.
- 4) Remove the clutch switches.

B: INSTALLATION

1. CLUTCH SWITCH (CRUISE CONTROL)

1) Move the clevis pin of push rod to left and right, retain it at the position where it moves smoothly, and measure the clutch pedal stroke.

Clutch pedal full stroke A:

STI model


130 — 135 mm (5.12 — 5.31 in)

Except for STI model

135 — 140 mm (5.31 — 5.51 in)

Tightening torque:

T: 8 N·m (0.8 kgf-m, 5.9 ft-lb)

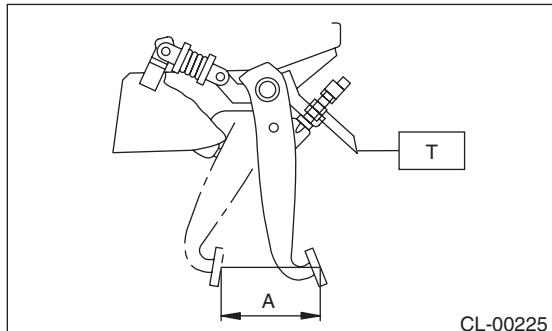


2) If the clutch pedal stroke is out of specification, adjust the stroke. <Ref. to CL-33, ADJUSTMENT, Clutch Pedal.>

3) Connect the clutch switch connector.

2. CLUTCH START SWITCH

1) Remove the snap pin and clevis pin connecting the clutch pedal and operating rod.

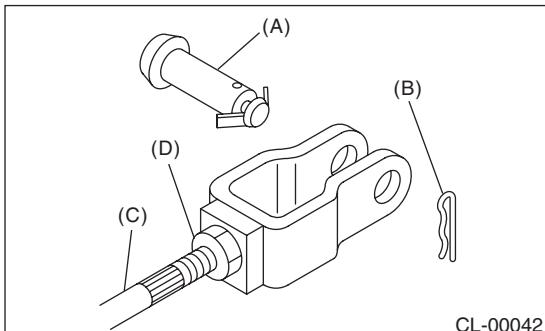

(A) Clevis pin

(B) Snap pin

(C) Push rod

(D) Lock nut


2) Install the clutch start switch so that the clutch switch turns on when the clearance between clutch pedal stopper and clutch pedal is within the specification described below.

Clearance A:

6.3 — 8.6 mm (0.25 — 0.34 in)

Tightening torque:

8 N·m (0.8 kgf-m, 5.9 ft-lb)

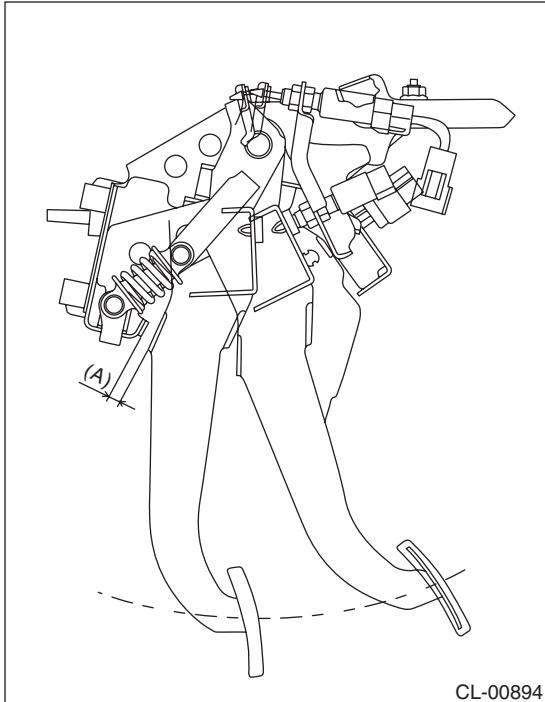


Clutch Switch

CLUTCH SYSTEM

NOTE:


- Using a plate of the same thickness for the clearance facilitates the adjustment operation.
- Using the Subaru Select Monitor or a tester, check the position where the switch turns on. Check the following figure for the terminal layout of the harness connector.

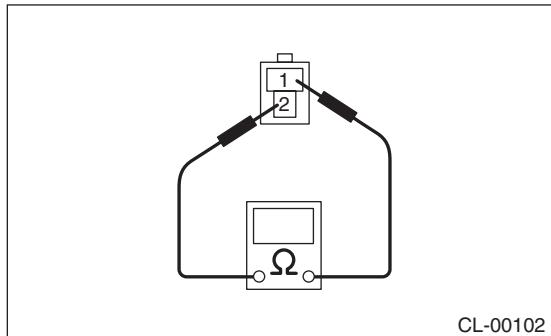

- When performing adjustment by the clearance between clutch start switch and clutch pedal plate, perform installation according to the following gap.

Clearance B:

8.6 — 9.0 mm (0.34 — 0.35 in)

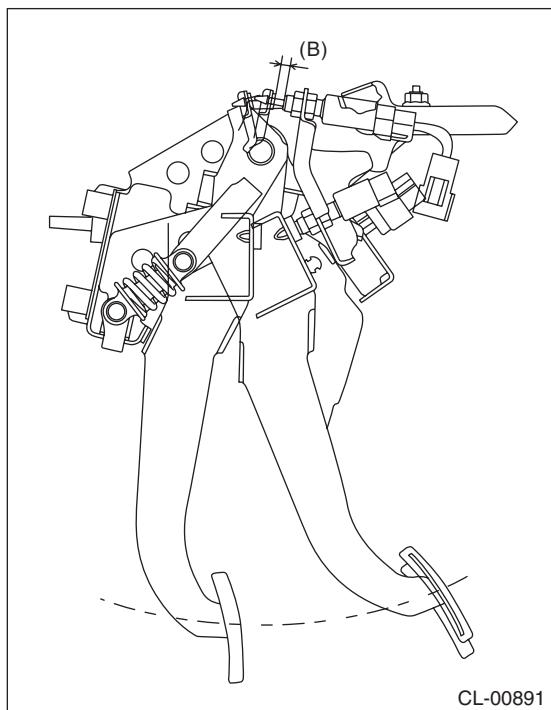

CL-00891

- 3) Connect the clutch start switch connector.
- 4) Make sure that engine does not start with clutch pedal not depressed.
- 5) Make sure that engine starts with clutch pedal depressed.

C: INSPECTION

1. CLUTCH START SWITCH

1) Perform the following inspections. If the clutch start switch does not operate normally, adjust the switch, and check it again. <Ref. to CL-37, ADJUSTMENT, Clutch Switch.>


- Make sure that engine does not start with clutch pedal not depressed.
- Make sure that engine starts with clutch pedal fully depressed.

2) When the clutch start switch does not operate normally even if it is adjusted, check the clutch start switch for continuity.

(1) Remove the clutch start switch. <Ref. to CL-35, REMOVAL, Clutch Switch.>

(2) Measure the resistance between terminal 1 and 2 of the switch. If the resistance is not at the standard value, replace the switch.


Condition	Terminal No.	Specified resistance
ON	No. 1 — No. 2	Less than 1 Ω
OFF	No. 1 — No. 2	1 MΩ or more

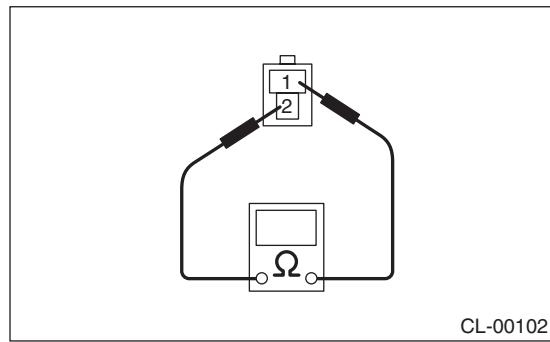

(3) Check that the switch is turned on and off in dimension L.

Dimension L:

9 — 10 mm (0.35 — 0.39 in)

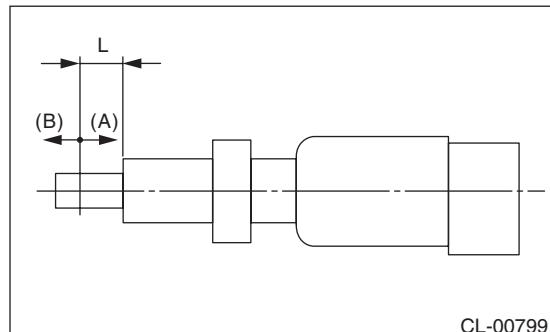

CL-00799

(A) ON


(B) OFF

2. CLUTCH SWITCH

1) Check the clutch switch for continuity.

- (1) Disconnect the connector of clutch switch.
- (2) Measure the resistance between terminal 1 and 2 of the switch. If the resistance is not within the specification, check the clutch stroke and installation condition, and check the clutch switch again.

Condition	Terminal No.	Specified resistance
When clutch pedal is depressed	No. 1 — No. 2	1 MΩ or more
When the clutch pedal is not depressed	No. 1 — No. 2	Less than 1 Ω

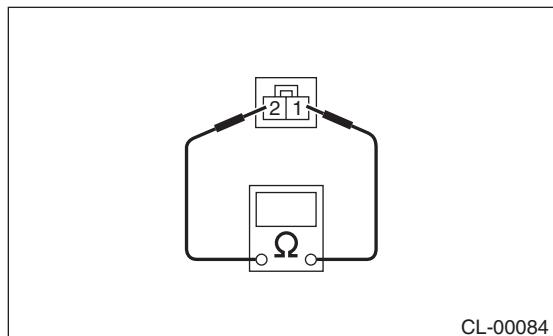


CL-00084

2) When the clutch switch does not operate normally even if the clutch stroke and installation condition are normal, check the clutch switch for continuity.

- (1) Remove the clutch switches. <Ref. to CL-35, REMOVAL, Clutch Switch.>
- (2) Measure the resistance between terminal 1 and 2 of the switch. If the resistance is not at the standard value, replace the switch.

Condition	Terminal No.	Specified resistance
ON	No. 1 — No. 2	Less than 1 Ω
OFF	No. 1 — No. 2	1 MΩ or more

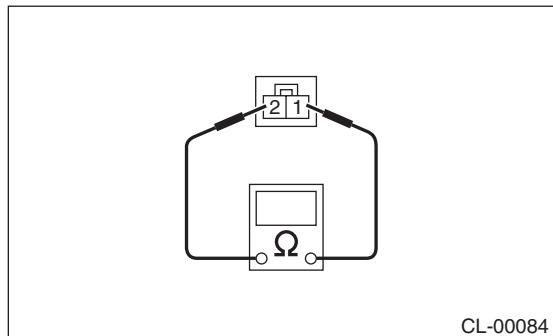


CL-00084

(3) Check that the switch is turned on and off in Dimension L.

Dimension L:

5 — 6.5 mm (0.2 — 0.26 in)

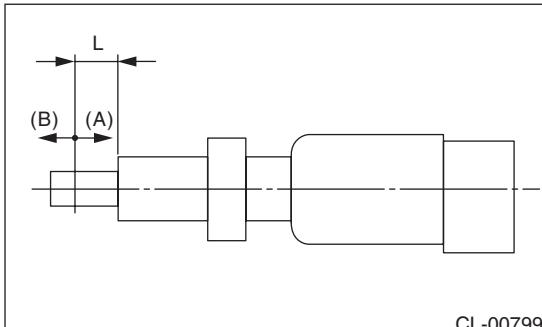


CL-00799

(A) ON
(B) OFF

D: ADJUSTMENT

1) Loosen the lock nut of the clutch start switch.

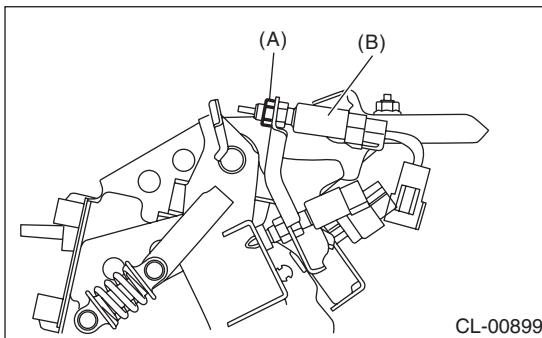


CL-00899

(A) Lock nut
(B) Clutch start switch

2) Disconnect the harness connector of the clutch start switch.

3) Remove the snap pin and clevis pin connecting the clutch pedal and operating rod.

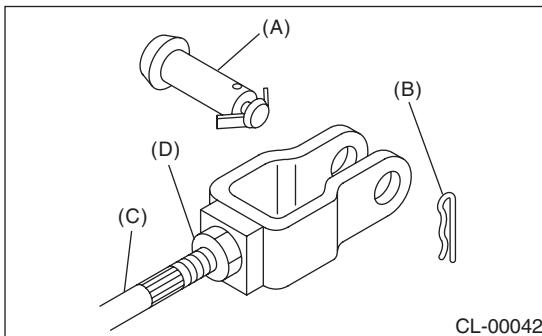

CL-00042

(A) Clevis pin
(B) Snap pin
(C) Push rod
(D) Lock nut

Clutch Switch

CLUTCH SYSTEM


4) Adjust the clutch start switch so that the switch turns on when the clearance between clutch pedal stopper and clutch pedal is within the specification described below, and then tighten the lock nut.

Clearance A:

6.3 — 8.6 mm (0.25 — 0.34 in)

Tightening torque:


8 N·m (0.8 kgf·m, 5.9 ft-lb)

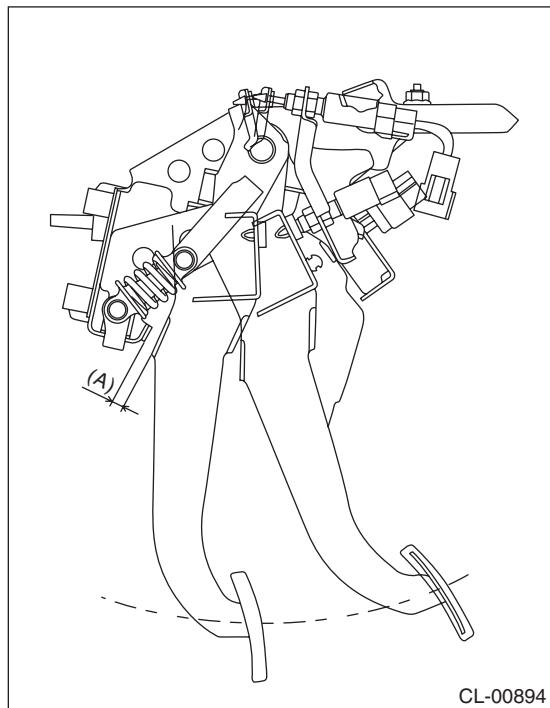

- When performing adjustment by the clearance between clutch start switch and clutch pedal plate, perform installation according to the following gap.

Clearance B:

8.6 — 9.0 mm (0.34 — 0.35 in)

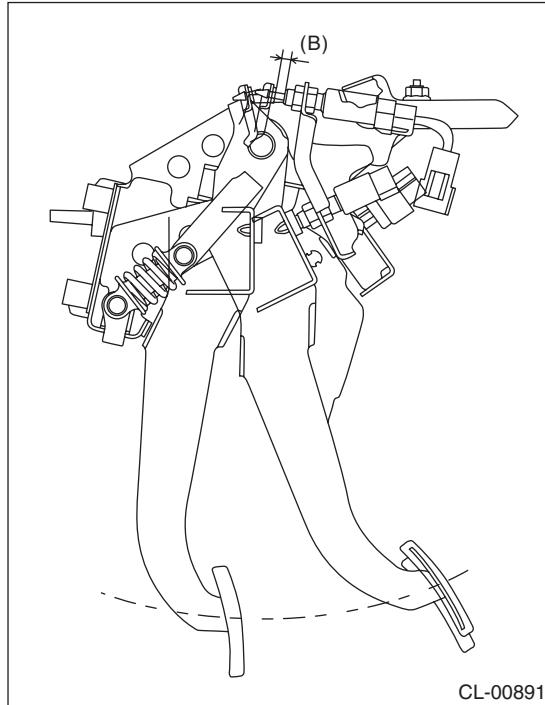

5) Connect the clutch start switch connector.

NOTE:

- Using a plate of the same thickness for the clearance facilitates the adjustment operation.
- Using the Subaru Select Monitor or a tester, check the position where the switch turns on.

Check the following figure for the terminal layout of the harness connector.

