


## 4. Front Crossmember Support Plate


### A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove the under cover - front. <Ref. to EI-21, REMOVAL, Front Under Cover.>
- 3) Remove the bolt, and remove the front crossmember support.

- Electric power steering model

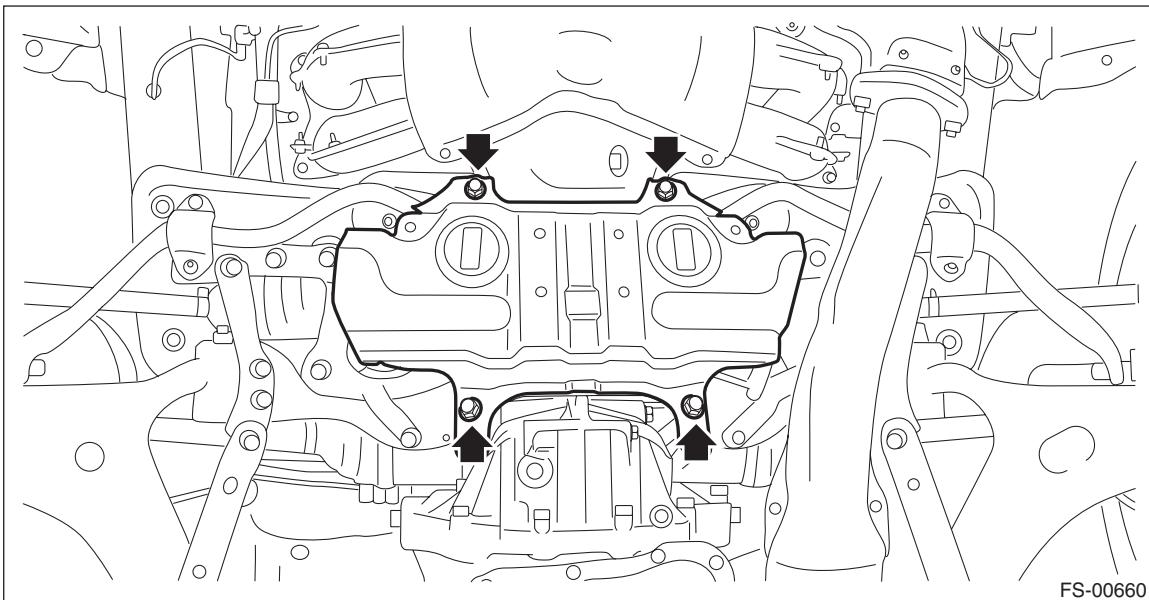


- Hydraulic power steering model

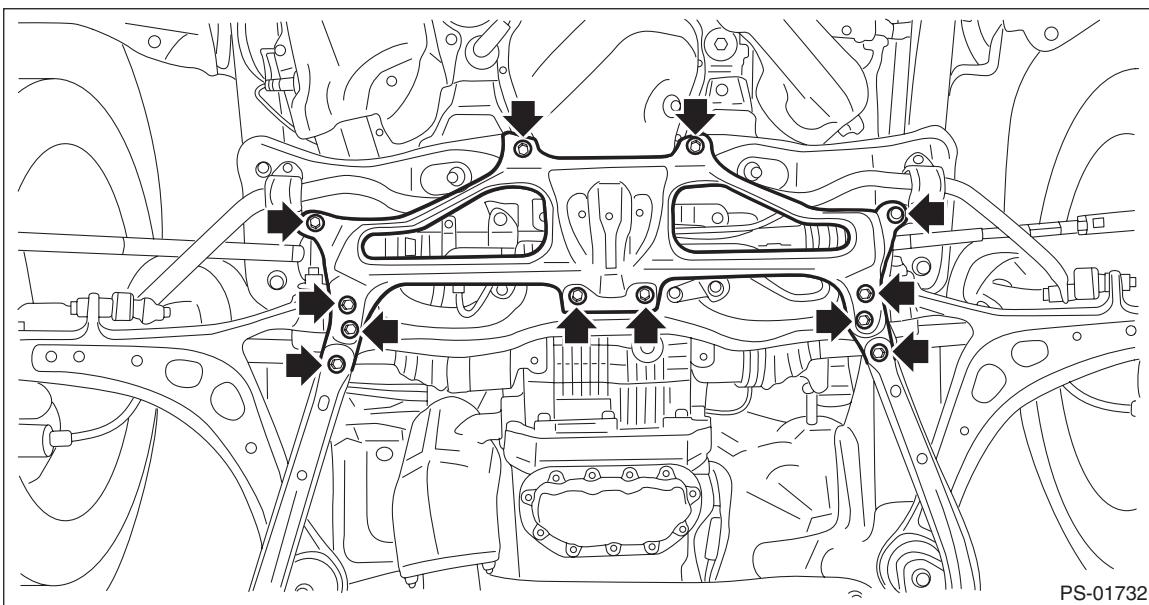

# Front Crossmember Support Plate

## FRONT SUSPENSION


- 4) Remove the bolt, and remove the support plate - front crossmember (a).

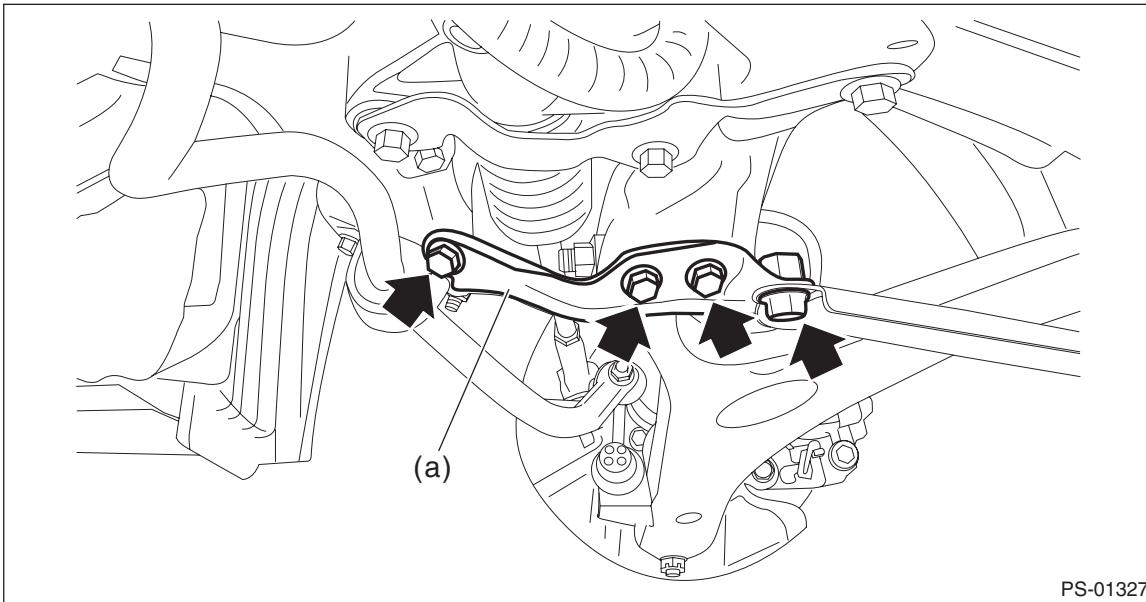

## B: INSTALLATION

### CAUTION:

Install the under cover - front so that the front end of the under cover (b) comes inside the bumper face - front (a).

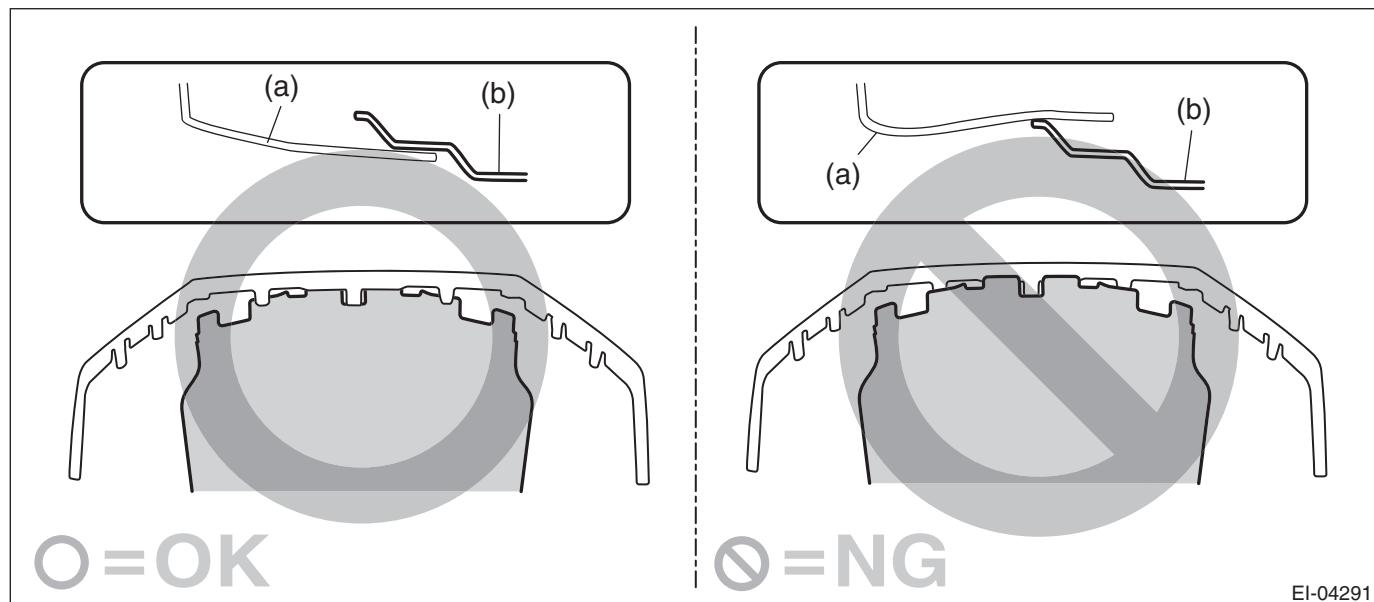

- 1) Install the front crossmember support and the support plate - front crossmember.

### Tightening torque:

Refer to "COMPONENT" of "General Description" for the tightening torque. <Ref. to FS-4, COMPONENT, General Description.>

- 2) Install the under cover - front. <Ref. to EI-22, INSTALLATION, Front Under Cover.>
- 3) Lower the vehicle.