

2. Wheel Alignment

A: INSPECTION

NOTE:

For wheel alignment, measure or adjust the front and rear wheels at a time. Refer to "Wheel Alignment" in "FRONT SUSPENSION" section for measurement and adjustment procedures of wheel alignment.

- Inspection: <Ref. to FS-10, INSPECTION, Wheel Alignment.>
- Adjustment: <Ref. to FS-15, ADJUSTMENT, Wheel Alignment.>