


Electrical Component Location

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

3. Electrical Component Location

A: LOCATION

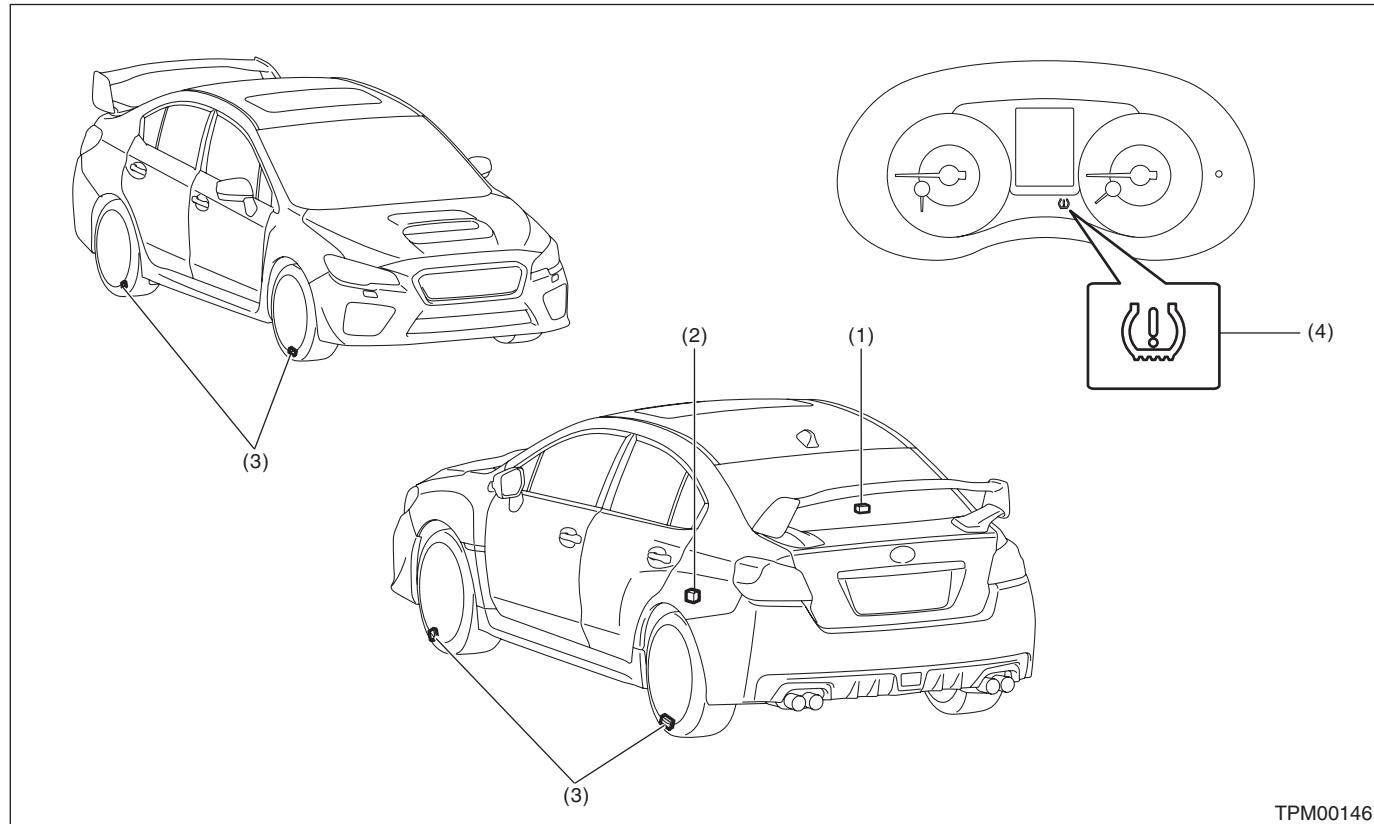

(1) TPMS & keyless entry CM (without push button start) (3) Snap-in type transmitter (4) Tire pressure warning light

(2) TPMS CM (with push button start)