

Read Current Data

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

8. Read Current Data

A: OPERATION

For the operation procedure, refer to the “PC application help for Subaru Select Monitor”.

B: LIST

Display	Contents to be displayed	Unit of measure
Tire 1 FN code		LEARN: Transmitted transmitter ID using the transmitter registration tool
Tire 2 FN code		LOW BAT: Transmitter battery voltage running low
Tire 3 FN code		OFF: Transmitter function stops (no data transmission)
Tire 4 FN code	LEARN, LOW BAT, OFF, WAKE, RE ME, NORMAL	RE ME: Tire air changes ± 8.4 kPa WAKE: When data transmission is started from a stopped state. NORMAL: Conditions other than above
Tire 1 air pressure	Value converted to tire pressure from data delivered from transmitter is displayed. (The figure may differ from the actual measured values.)	kPa, psig, mmHg, inHg
Tire 2 air pressure		kPa, psig, mmHg, inHg
Tire 3 air pressure		kPa, psig, mmHg, inHg
Tire 4 air pressure		kPa, psig, mmHg, inHg
Vehicle Speed	Vehicle speed signal which is input in control module	km/h, MPH
Pressure warning	Threshold where tire pressure warning light illuminates	kPa, psig, mmHg, inHg
Return pressure	Threshold where tire pressure warning light goes out	kPa, psig, mmHg, inHg