

General Diagnostic Table

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

15.General Diagnostic Table

A: INSPECTION

Symptoms		Faulty parts
Tire pressure warning light illuminates.	Tire pressure is reduced.	<ul style="list-style-type: none">• Improper tire pressure adjustment• Punctured tire
Tire pressure warning light blinks 25 times and then illuminates.	Tire pressure monitoring system has malfunction.	<ul style="list-style-type: none">• Air pressure sensor malfunction• Air pressure sensor is out of battery.• Defective TPMS & keyless entry CM or TPMS CM• Defective vehicle harness• Defective combination meter
Tire pressure is dropping but the warning light does not illuminate.	Tire pressure warning light does not illuminate.	<ul style="list-style-type: none">• Air pressure sensor is faulty.• Defective TPMS & keyless entry CM or TPMS CM• Defective combination meter

DIFFERENTIALS

DI

	Page
1. General Description	2
2. Differential Gear Oil	16
3. Front Differential Assembly	18
4. Rear Differential (T-type)	19
5. Rear Differential Front Oil Seal	53
6. Rear Differential Side Oil Seal	55
7. Rear Differential Front Member	56
8. Rear Differential Mount Bushing	57
9. General Diagnostic Table	61