

6. Rear Differential Side Oil Seal


A: INSPECTION

Check that there is no oil leakage from the side oil seal. If there is any leakage, replace the oil seal.

B: REPLACEMENT

- 1) Remove the rear differential. <Ref. to DI-19, REMOVAL, Rear Differential (T-type).>
- 2) Remove the rear differential side oil seal using a ST or screwdriver wrapped with vinyl tape to prevent the side retainer from scratching.

ST 398527700 PULLER ASSY

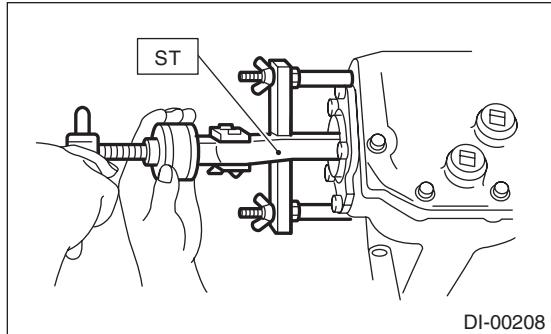

- 3) Using the ST, install the oil seal.


CAUTION:

Pay attention to the left and right of the oil seal.

NOTE:

- Use a new oil seal.
- Apply differential gear oil to the oil seal lips.

ST 398437700 DRIFT

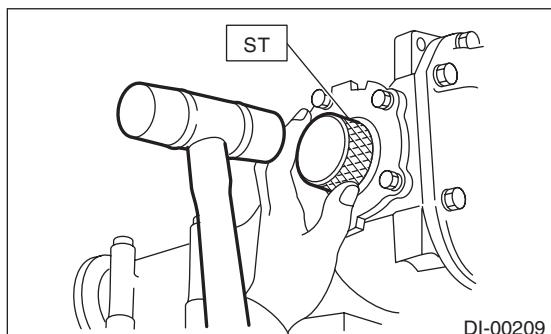

- 4) Install the rear differential. <Ref. to DI-21, INSTALLATION, Rear Differential (T-type).>