

## 5. Oil Seal

### A: NOTE

For removal, installation and inspection, refer to "CVT (TR690)", "6MT (TY85)" or "6MT (TY75)" section.

CVT (TR690) model:

<Ref. to CVT(TR690)-87, Extension Case Oil Seal.>

6MT (TY85) model:

<Ref. to 6MT(TY85)-27, Oil Seal.>

6MT (TY75) model:

<Ref. to 6MT(TY75)-40, Oil Seal.>