


Relay and Fuse

VEHICLE DYNAMICS CONTROL (VDC)

2. Relay and Fuse

A: LOCATION

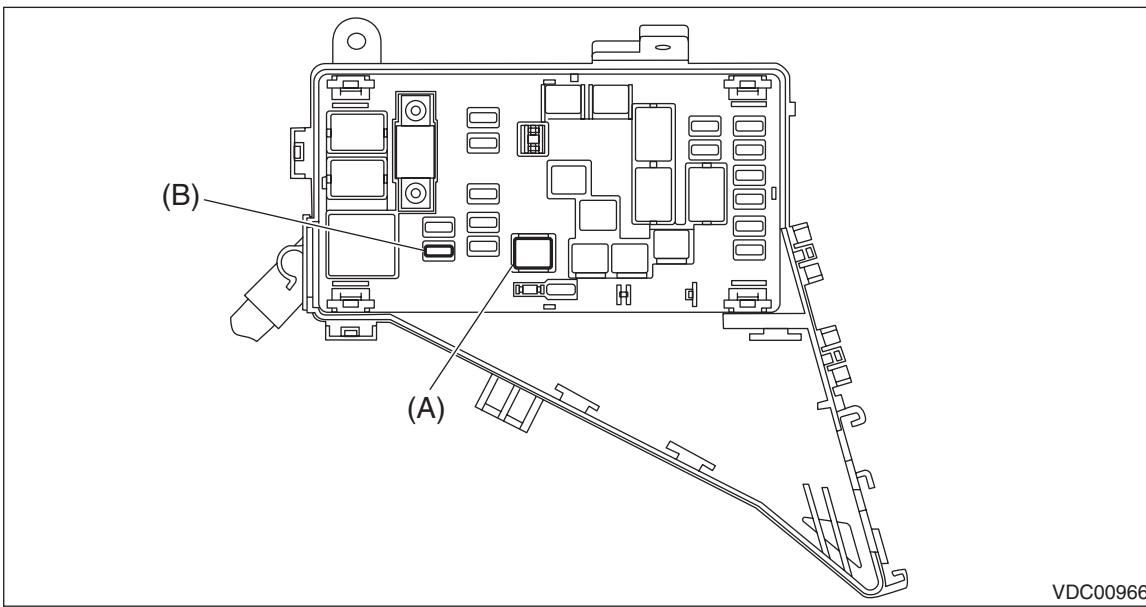

Main fuse box	Fuse 40A (VDC CM&H/U) Fuse 30A (VDC CM&H/U)	(A) (B)
---------------	--	------------

NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI-28, Power Supply Circuit.>

B: INSPECTION

1. CHECK FUSE

- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.