

General Description

BRAKE VACUUM CONTROL (BVC) (DIAGNOSTICS)

3. General Description

A: CAUTION

1. SRS AIRBAG SYSTEM

The airbag system wiring harness is routed near the main relay and ECM.

CAUTION:

- Do not use electrical test equipment on wiring harness and connector circuits of the airbag system.
- Be careful not to damage the airbag system wiring harness.

B: INSPECTION

Before performing diagnosis, check the following items which might affect the brake vacuum control.

1. BATTERY

Measure the battery voltage and check electrolyte.

Standard voltage: 12 V or more

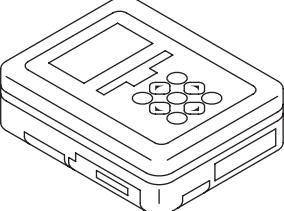
Specific gravity: 1.260 or more

2. BRAKE VACUUM HOSE

Make sure that the brake vacuum hose is not cracked or loose.

C: PREPARATION TOOL

1. SPECIAL TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST1B022XU0	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for troubleshooting the electrical system.

2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance, voltage and current.
Oscilloscope	Used for measuring the sensor.