

6. Subaru Select Monitor

A: OPERATION

1. HOW TO USE THE SUBARU SELECT MONITOR

For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.

2. READ CURRENT DATA

For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.

A list of the support data is shown in the following table.

Display	Contents to be displayed	Unit of measure
Atmosphere Pressure	Atmospheric pressure is displayed.	kPa
Brake Booster Pressure	Brake booster pressure is displayed.	kPa
Vacuum Pump Motor	Operation status of vacuum pump motor is displayed.	ON or OFF
Vacuum Pump Motor Relay	Operation status of vacuum pump motor relay is displayed.	ON or OFF

3. SEQUENCE CONTROL MODE

- 1) Turn the ignition switch to ON (engine OFF) and run the Subaru Select Monitor.
- 2) On «Main Menu» display, select {Each System Check}.
- 3) On «System Selection Menu» display, select {Brake Vacuum Pump System}.
- 4) On «Brake Vacuum Pump System» display, select {Work Support}.
- 5) On «Work Support» display, select {Function Check Sequence}.
- 6) When «Sequence Control Mode will be started» is shown on the screen, click the [OK] button.
- 7) When «Depress Brake Pedal Five Times» is shown on the screen, depress the brake pedal 5 times, and click the [OK] button while the brake pedal is not depressed.
- 8) Click the [OK] button after the «OK» is displayed.