

## **Clear Memory Mode**

BRAKE VACUUM CONTROL (BVC) (DIAGNOSTICS)

---

### **9. Clear Memory Mode**

#### **A: OPERATION**

For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.