

9. Blower Motor Unit Assembly

A: REMOVAL

1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.


2) Remove the glove box. <Ref. to EI-63, REMOVAL, Glove Box.>

3) Remove the engine control module (ECM). (STI model) <Ref. to FU(STI)-56, REMOVAL, Engine Control Module (ECM).>

4) Remove the blower motor unit assembly.

(1) Release the claws, and then remove the grille assembly - ventilation RH.


(2) Disconnect the blower motor relay and each connector.

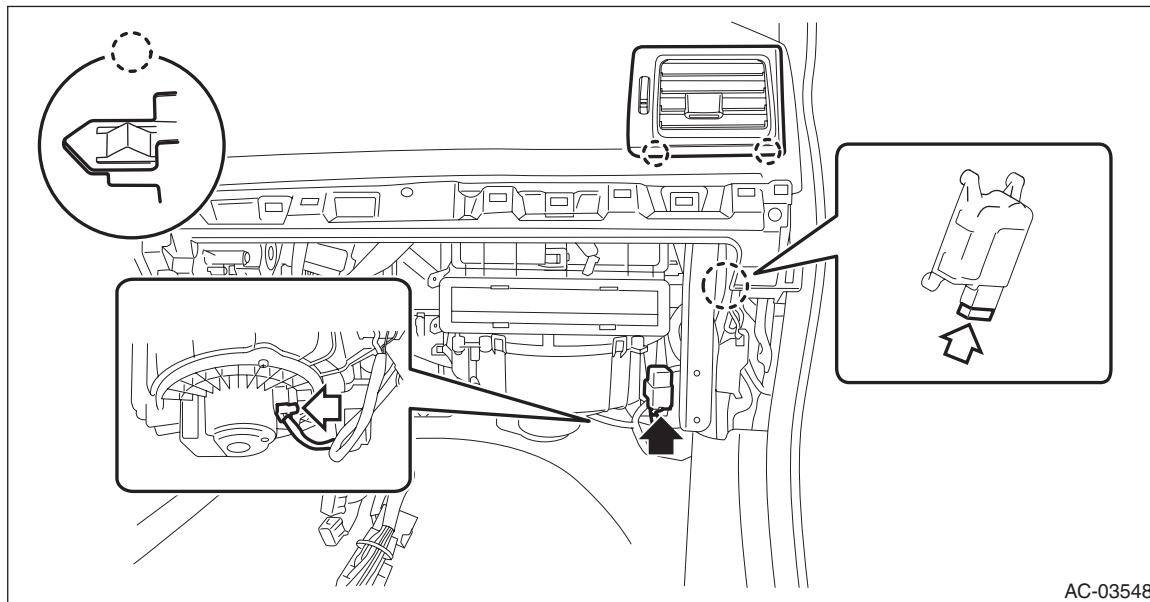

(3) Remove the bolts and nuts to remove blower motor unit assembly.

NOTE:

Remove the RH upper nut from the mounting portion of the grille assembly - ventilation RH.

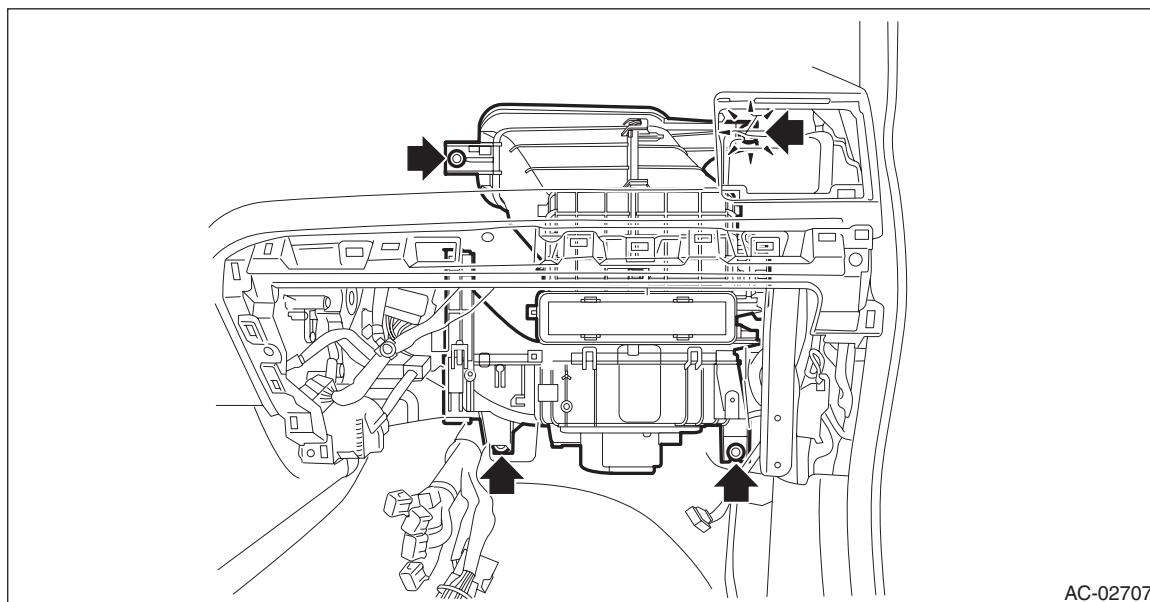

Blower Motor Unit Assembly

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

B: INSTALLATION

CAUTION:

After installing the grille assembly - ventilation RH, check that the air vent grille of the grille assembly - ventilation RH is inserted correctly into the air vent duct.

- 1) Install the blower motor unit assembly.

Tightening torque:

7.5 N·m (0.8 kgf·m, 5.5 ft-lb)

- 2) Install the grille assembly - ventilation RH
- 3) Install the engine control module (ECM). (STI model) <Ref. to FU(STI)-56, INSTALLATION, Engine Control Module (ECM).>
- 4) Install the glove box.
- 5) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.