

10. Blower Motor

A: REMOVAL


- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

- 2) Remove the blower - motor.

- (1) Disconnect the connector.
- (2) Remove the screws and detach the blower - motor.

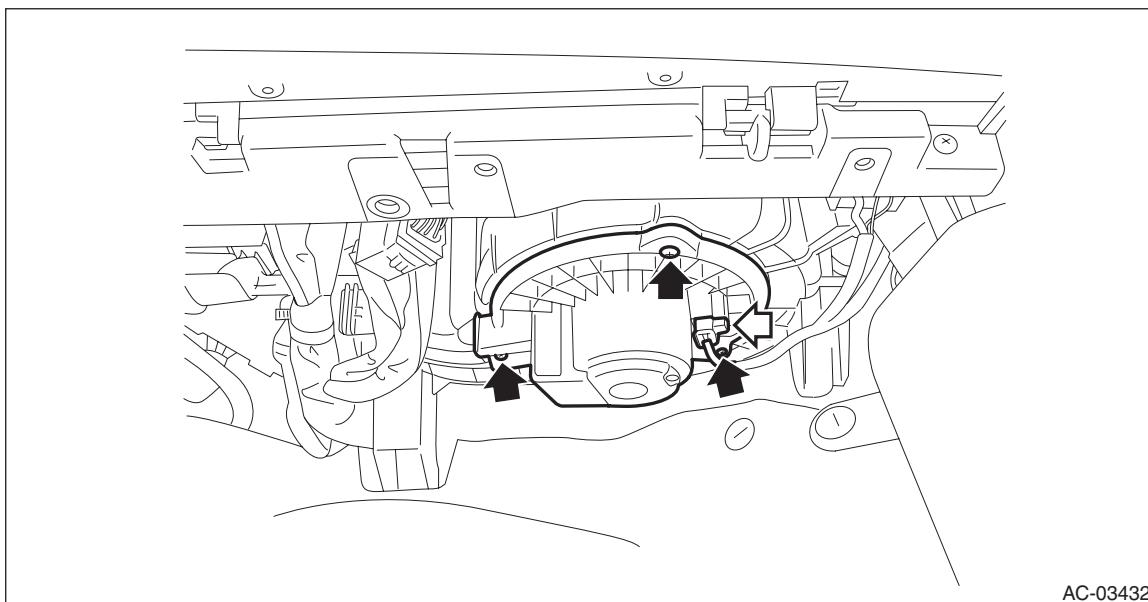

B: INSTALLATION


- 1) Install the blower - motor.
- 2) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.

C: INSPECTION

- 1) Check the motor operation when battery voltage is applied between the connector terminals.

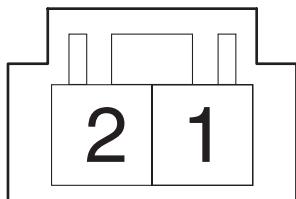

Terminal No.	Inspection conditions	Specification
2 (+) — 1 (-)	Apply battery voltage.	Rotation

- 2) If it does not operate normally, replace the blower - motor.