

Power Transistor (Auto A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

11. Power Transistor (Auto A/C Model)

A: REMOVAL

- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:


For models other than STI model, disconnect the ground terminal from battery sensor.

- 2) Remove the glove box. <Ref. to EI-63, REMOVAL, Glove Box.>

- 3) Remove the screws and remove the duct - foot RH.

NOTE:


Remove the connector and harness clip of the motor - actuator mix RH, and move the harness aside.

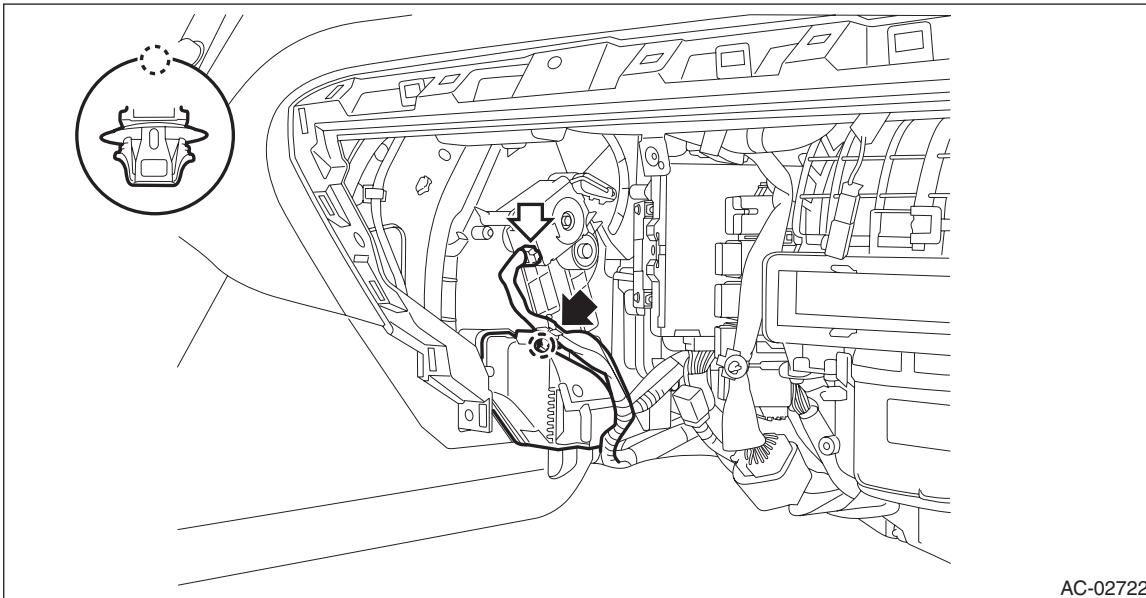

- 4) Remove the power transistor.

(1) Disconnect the connector.

(2) Remove the power transistor while pressing the power transistor claw part and sliding it.

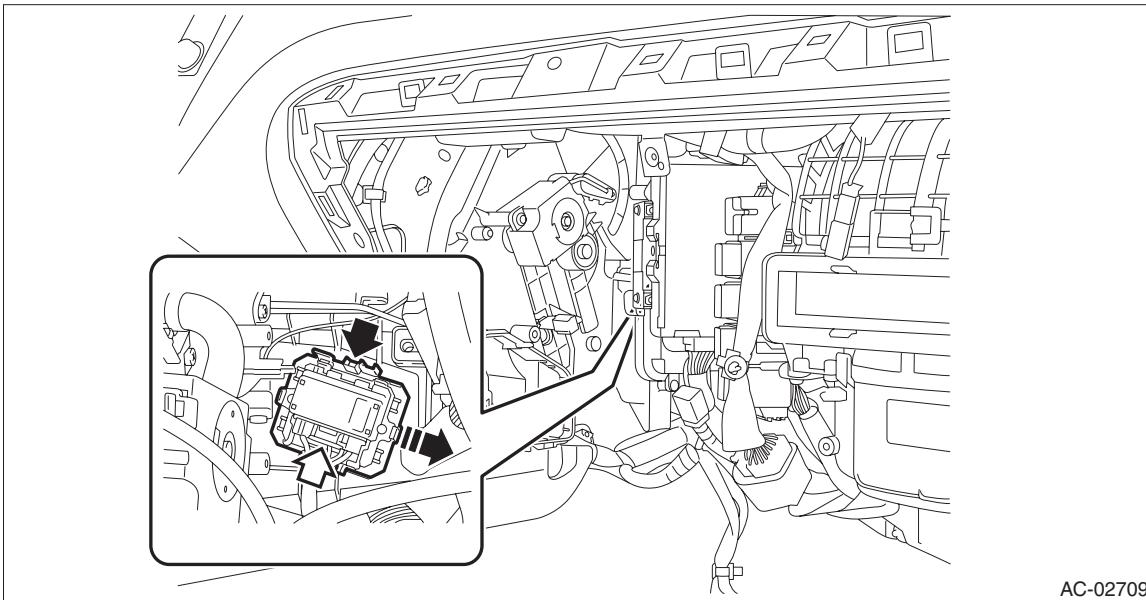

B: INSTALLATION

- 1) Install the power transistor.
- 2) Install the duct - foot RH.
- 3) Install the glove box.
- 4) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.