

Control Panel

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

13. Control Panel

A: REMOVAL

- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:


For models other than STI model, disconnect the ground terminal from battery sensor.

- 2) Remove the panel center assembly. <Ref. to EI-66, REMOVAL, Center Console.>

- 3) Remove the heater control assembly.

(1) Remove the screws.

(2) Release the claws, and remove the heater control assembly.

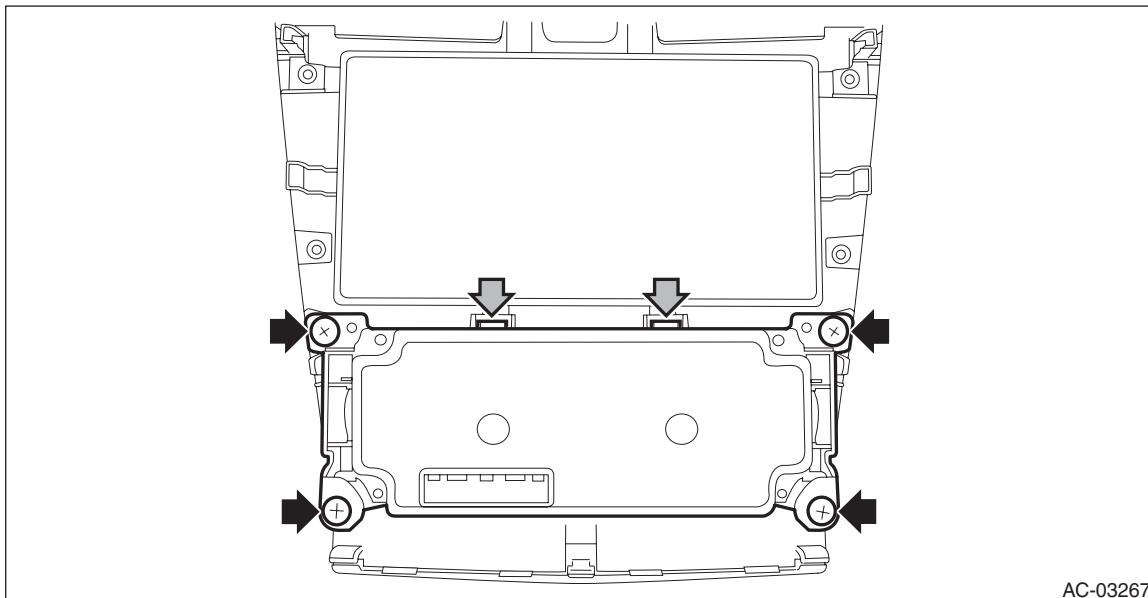

B: INSTALLATION


- 1) Install the heater control assembly.
- 2) Install the panel center assembly.
- 3) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.

C: INSPECTION

- 1) Check the illumination operation when battery voltage is applied between the connector terminals.

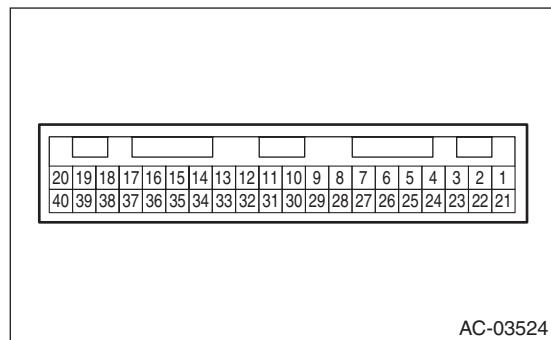

Terminal No.	Inspection conditions	Specification
37 (+) — 35 (-)	Apply battery voltage.	Light ON

- 2) If it does not operate normally, replace the heater control assembly.