

28. Air Vent Grille

A: REMOVAL

1. CENTER GRILLE ASSEMBLY


1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

2) Remove the panel center assembly. <Ref. to EI-66, REMOVAL, Center Console.>


3) Release the claws, and then remove the grille assembly - CTR ventilation.

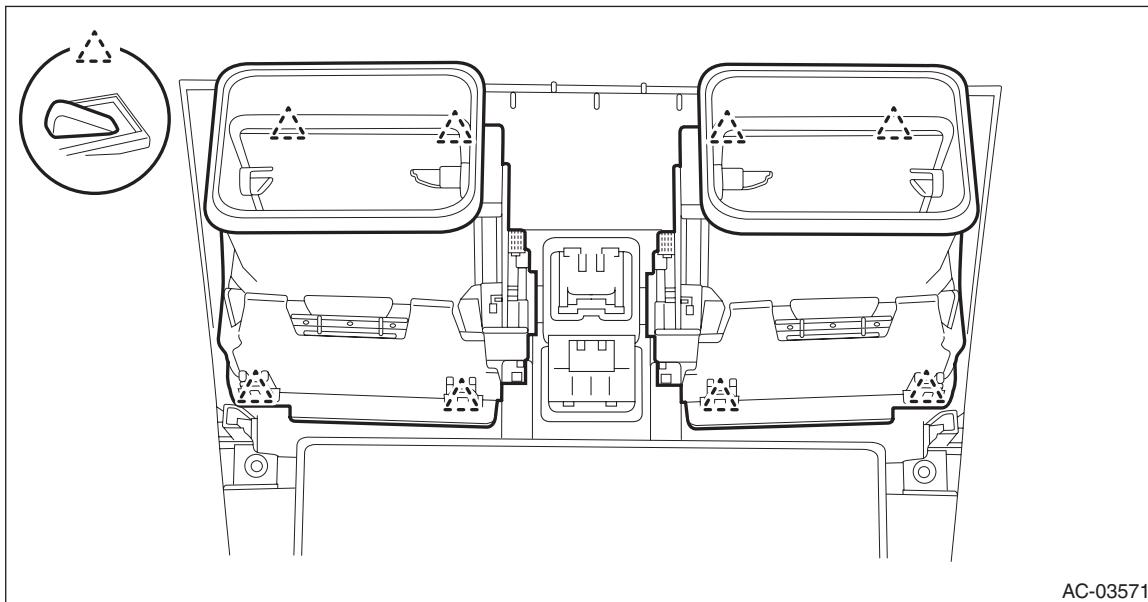

2. SIDE GRILLE ASSEMBLY

Release the claws, and then remove the grille assembly - ventilation.


- LH side

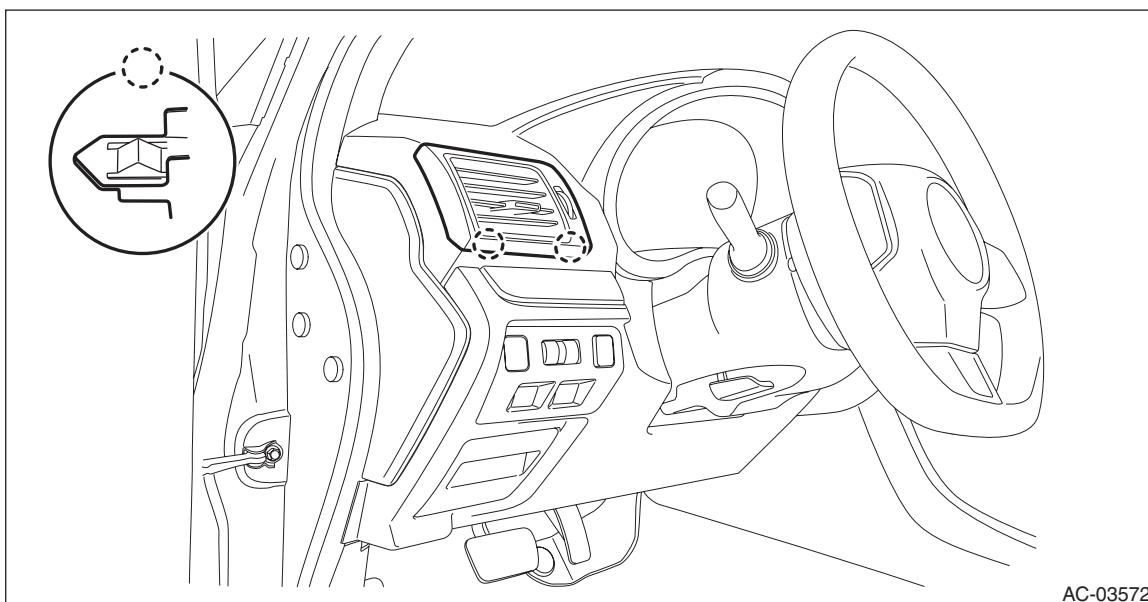

Air Vent Grille

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

- RH side

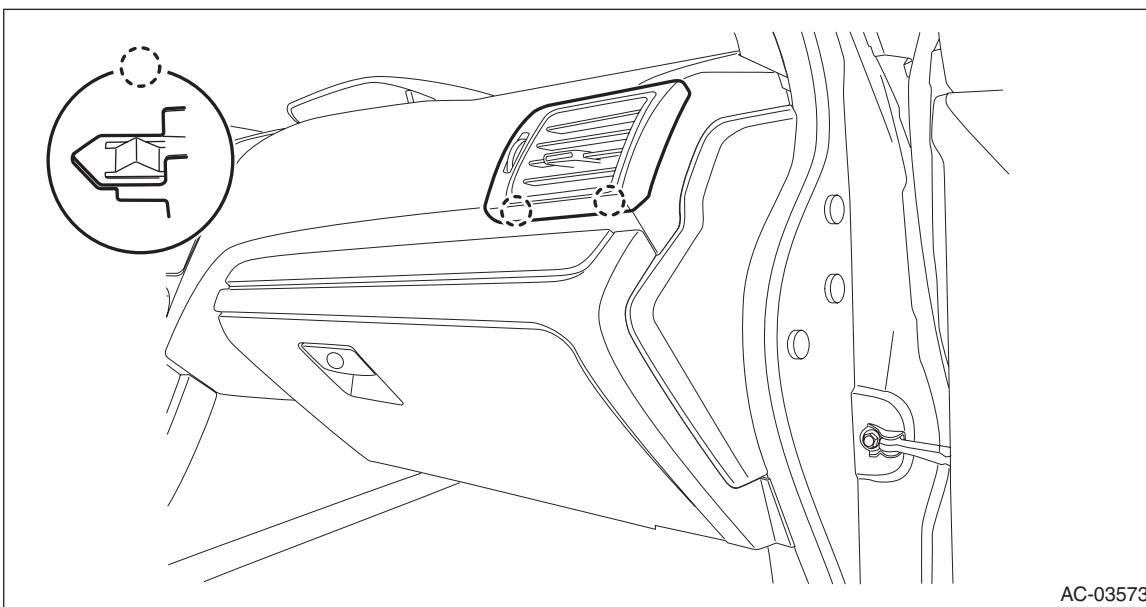

B: INSTALLATION

1. CENTER GRILLE ASSEMBLY

CAUTION:

After installing the panel center assembly or grille assembly - ventilation, check that the air vent grille is inserted correctly into the air vent duct.

- 1) Install the grille assembly - CTR ventilation.
- 2) Install the panel center assembly.
- 3) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.

2. SIDE GRILLE ASSEMBLY

CAUTION:

After installing the panel center assembly or grille assembly - ventilation, check that the air vent grille is inserted correctly into the air vent duct.

Install the grille assembly - ventilation.

C: INSPECTION

- 1) Check that the direction and amount of air can be adjusted smoothly. Replace the grille assembly - ventilation if faulty.
- 2) Check that the adjustment can be maintained in each position. Replace the grille assembly - ventilation if faulty.