

### 29. Heater Duct

#### A: REMOVAL

##### CAUTION:

Before handling the airbag module, refer to "CAUTION" of "General Description" in "AIRBAG SYSTEM". <Ref. to AB-9, CAUTION, General Description.>

1) Disconnect the battery ground cable and wait for at least 60 seconds before starting work. <Ref. to NT-5, BATTERY, NOTE, Note.>

##### NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

2) Remove the front seats. <Ref. to SE-9, REMOVAL, Front Seat.>


3) Remove the instrument panel assembly. <Ref. to EI-69, REMOVAL, Instrument Panel Assembly.>

4) Remove the duct - rear heater.

(1) Lift the floor carpet.

(2) Remove the clips, and remove the duct - rear heater CTR (A).

(3) Release the claws, and remove the duct - rear heater (B) on LH and RH sides.

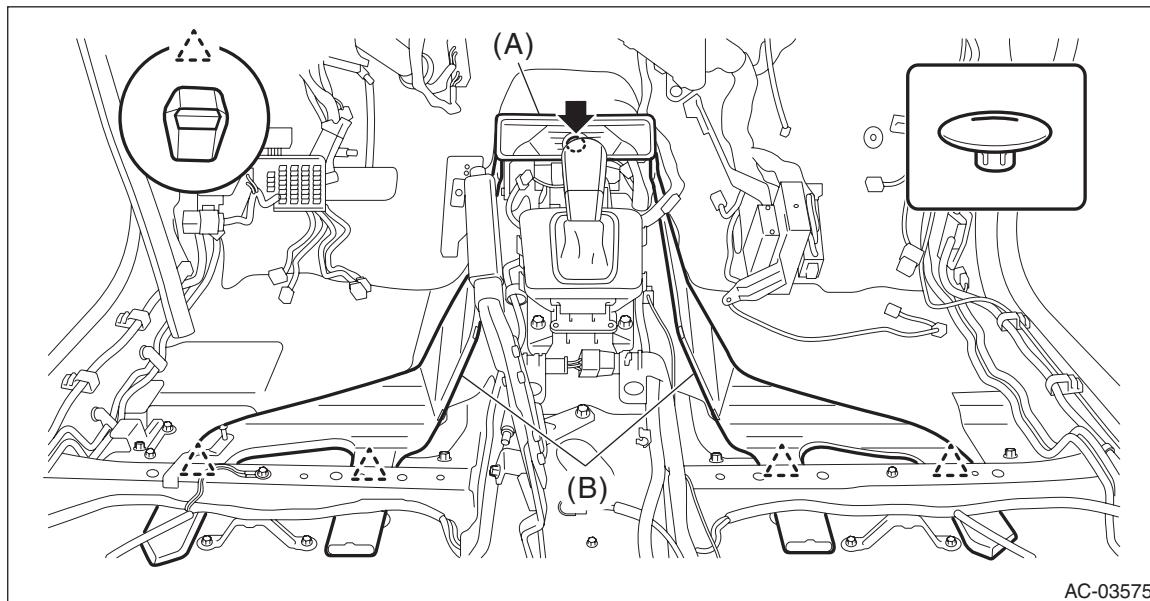

#### B: INSTALLATION

##### CAUTION:

Before handling the airbag module, refer to "CAUTION" of "General Description" in "AIRBAG SYSTEM". <Ref. to AB-9, CAUTION, General Description.>

1) Install the duct - rear heater.

2) Install the instrument panel assembly. <Ref. to EI-77, INSTALLATION, Instrument Panel Assembly.>

3) Install the front seat. <Ref. to SE-10, INSTALLATION, Front Seat.>

4) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

##### NOTE:

For models other than STI model, connect the ground terminal to battery sensor.