

14. Satellite Safing Sensor

A: REMOVAL

CAUTION:

The airbag system is fitted with a backup power supply. After disconnecting the battery ground cable, the airbag may operate if you do not wait for 60 seconds before starting the service of airbag system.

1) Turn the ignition switch to OFF.

2) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:


For models other than STI model, disconnect the ground terminal from battery sensor.

3) Remove the rear seat cushion assembly. <Ref. to SE-29, REMOVAL, Rear Seat.>

4) Remove the satellite safing sensor.

(1) Remove the clip, and remove the cover - satellite safing.

(2) Remove the bolts and then remove the satellite safing sensor. <Ref. to AB-21, FRONT DOOR IMPACT SENSOR AND SATELLITE SAFING SENSOR, PROCEDURE, Airbag Connector.>

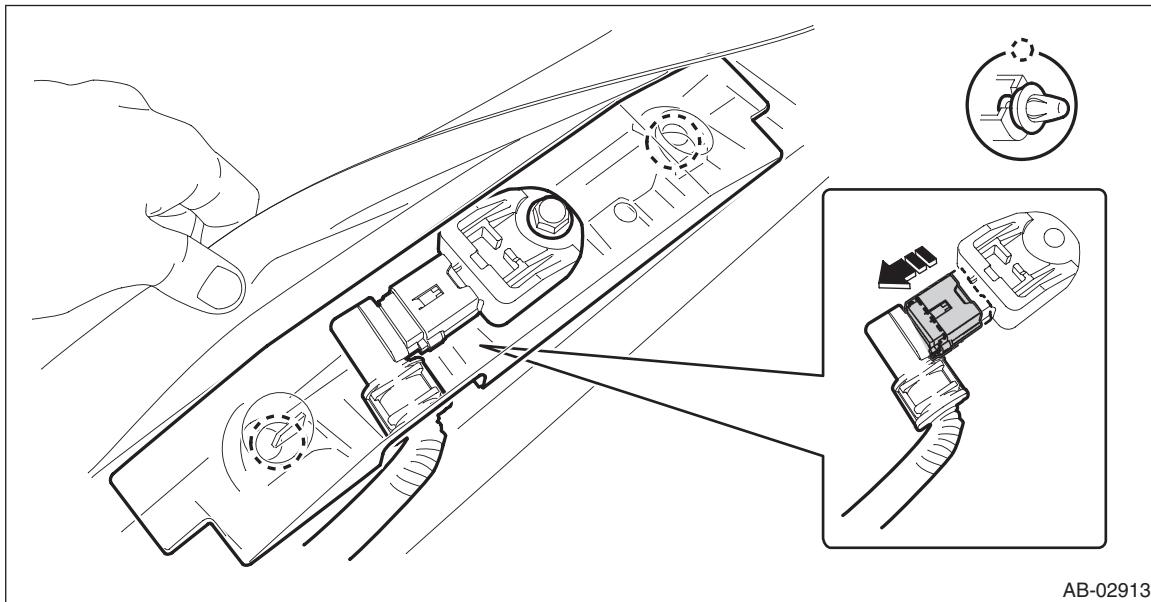

B: INSTALLATION

1) Install the satellite safing sensor.

CAUTION:

- Do not reuse the bolt and nut.

Always replace with the specified new bolts and nuts.

- When installing the cover - satellite safing, push the cover securely until it contacts the floor panel.
- If the cover - satellite safing is too loose at its mounting portion to remove easily, replace with a new cover - satellite safing.

- After installing the cover - satellite safing, make sure that the sensor harness does not get caught.

Tightening torque:

7.5 N·m (0.8 kgf-m, 5.5 ft-lb)

2) Install the rear seat cushion assembly.

3) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.

C: INSPECTION

Check for the following, and replace the damaged parts with new parts.

- The satellite safing sensor connector is damaged.
- The cover - satellite safing is damaged
- Side airbag or curtain airbag has been activated.