

8. Back-up Light System

A: WIRING DIAGRAM

Refer to "Back-up Light System" in the wiring diagram.

- ENGINE TYPE FA: <Ref. to WI-104, ENGINE TYPE FA, WIRING DIAGRAM, Back-up Light System.>
- ENGINE TYPE EJ: <Ref. to WI-107, ENGINE TYPE EJ, WIRING DIAGRAM, Back-up Light System.>

B: INSPECTION

1. CHECK BACK-UP LIGHT SWITCH (MT MODEL)

Refer to "MANUAL TRANSMISSION AND DIFFERENTIAL" section.

- Except for STI model: <Ref. to 6MT(TY75)-47, BACK-UP LIGHT SWITCH, INSPECTION, Switches and Harness.>
- STI model: <Ref. to 6MT(TY85)-40, INSPECTION, Back-up Light Switch.>

2. CHECK INHIBITOR SWITCH (CVT MODEL)

Refer to "Inhibitor Switch" in "CONTINUOUSLY VARIABLE TRANSMISSION" section. <Ref. to CVT(TR690)-92, INSPECTION, Inhibitor Switch.>

C: NOTE

For operation procedures of each component of the back-up light system, refer to the respective section.

- Rear combination light assembly: <Ref. to LI-49, Rear Combination Light Assembly.>
- Back-up light bulb: <Ref. to LI-55, Back-up Light Bulb.>