

## 16. Hazard Switch

### A: REMOVAL


- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

- 2) Remove the panel center assembly. <Ref. to EI-66, REMOVAL, Center Console.>

- 3) Release the claws, and then remove the switch - hazard.

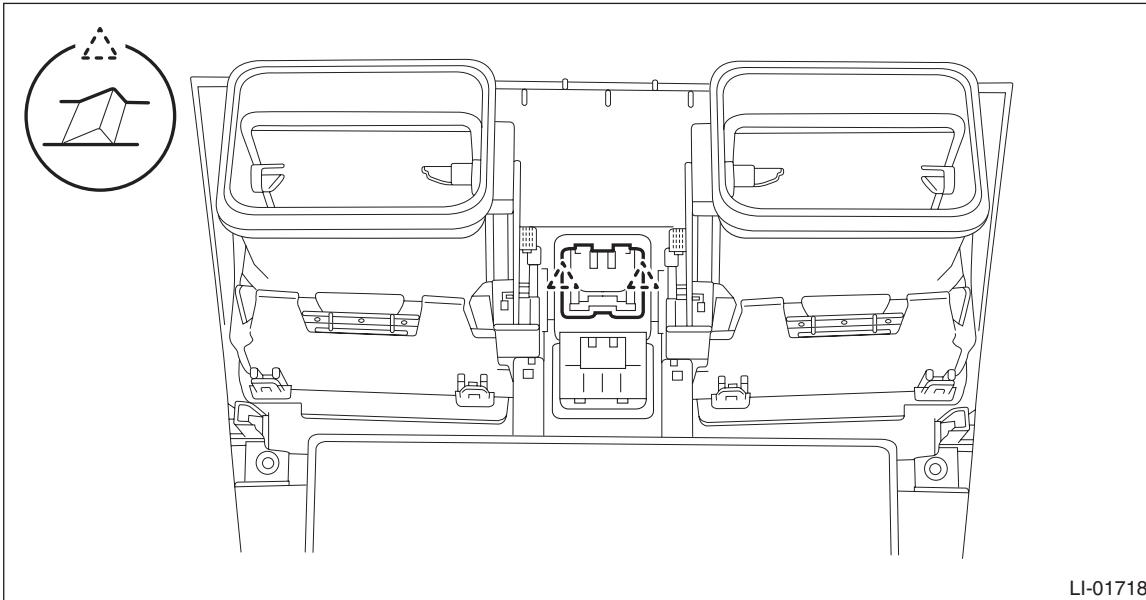

### B: INSTALLATION

**CAUTION:**

**After installing the panel center assembly, check that the air vent grille of the panel center assembly is inserted correctly into the air vent duct.**

- 1) Install the switch - hazard.
- 2) Install the panel center assembly.
- 3) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.


# Hazard Switch

## LIGHTING SYSTEM

### C: INSPECTION

- 1) Measure the resistance between connector terminals.

**Preparation tool:**  
*Circuit tester*

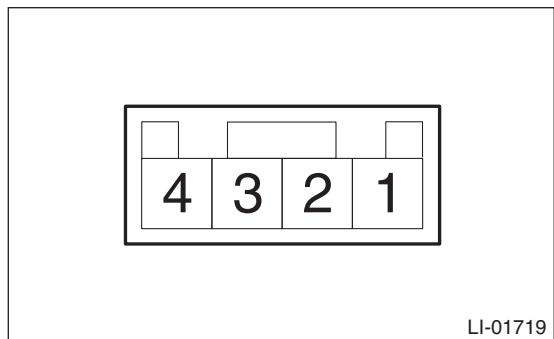

Terminal No.	Inspection conditions	Standard
2 — 3	Switch OFF	1 MΩ or more
	Switch ON	Less than 1 Ω

- 2) Apply battery voltage between the connector terminals to check the lighting condition of the light.

Terminal No.	Inspection conditions	Specification
4 (+) — 1 (-)	Apply battery voltage.	Light ON

- 3) Replace the switch - hazard if the inspection result is not within the standard value.