

## 18. Front Turn Signal Light Assembly


### A: REMOVAL

1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

2) Release the claws, and then remove the cover - fog light.

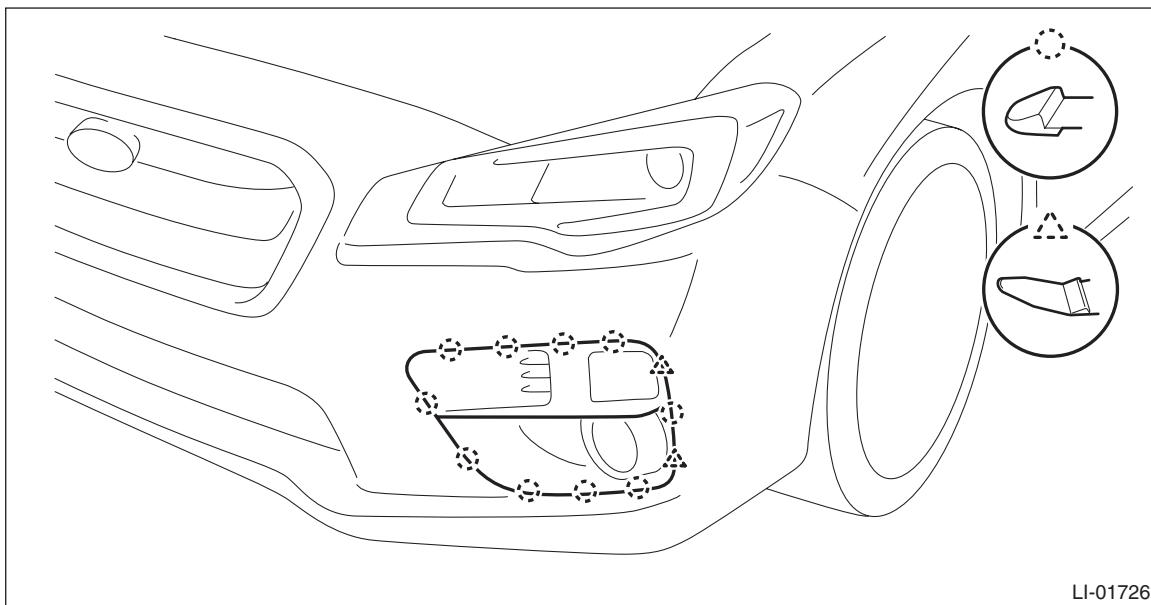


NOTE:

If it is hard to remove, push the claw from the back.

3) Lift up the vehicle.

4) Remove the screw and clips, and turn over the front side of the mud guard - front.

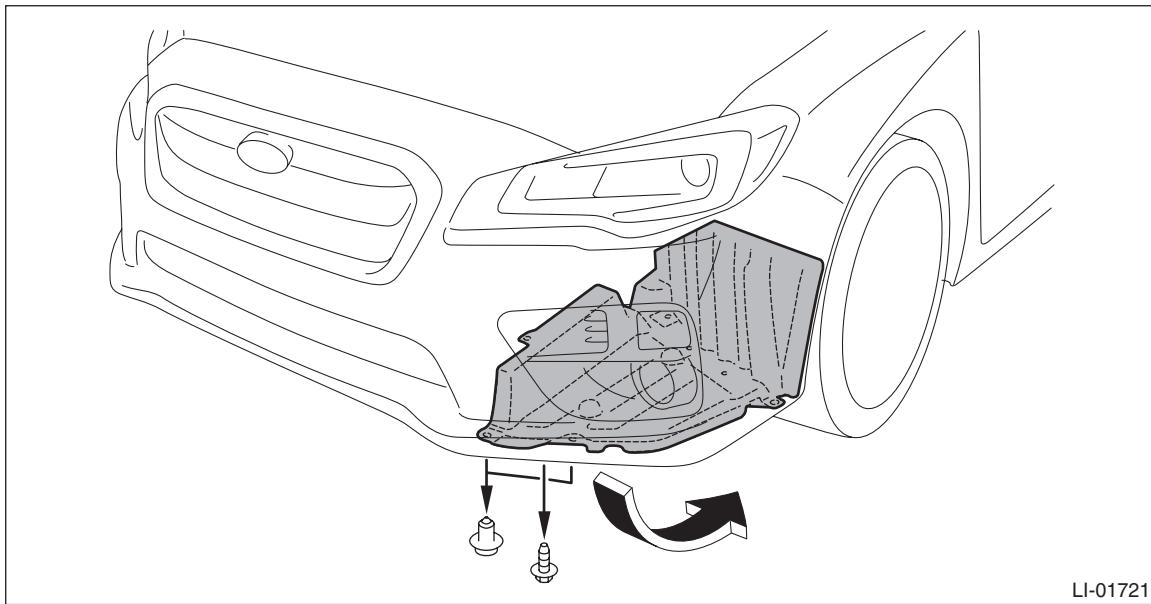


# Front Turn Signal Light Assembly

## LIGHTING SYSTEM

5) Remove the turn signal light assembly - front.

(1) Disconnect the connector.


(2) Remove the nuts and remove the turn signal light assembly - front.

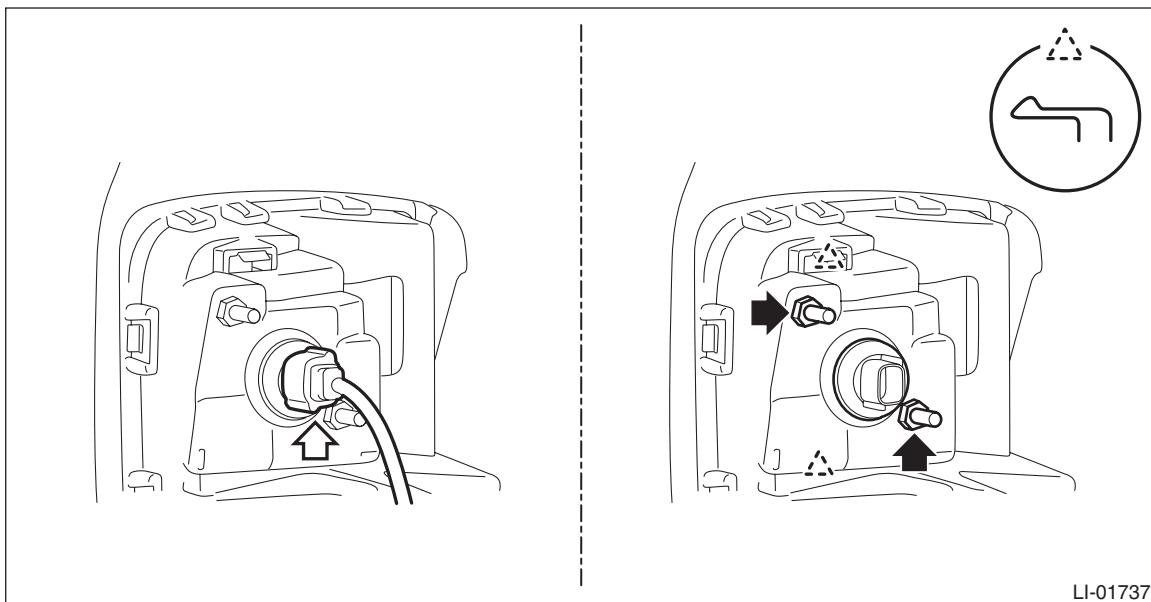

## B: INSTALLATION

### CAUTION:

Install the mud guard - front so that the front end of the mud guard (b) comes outside the bumper face - front (a).

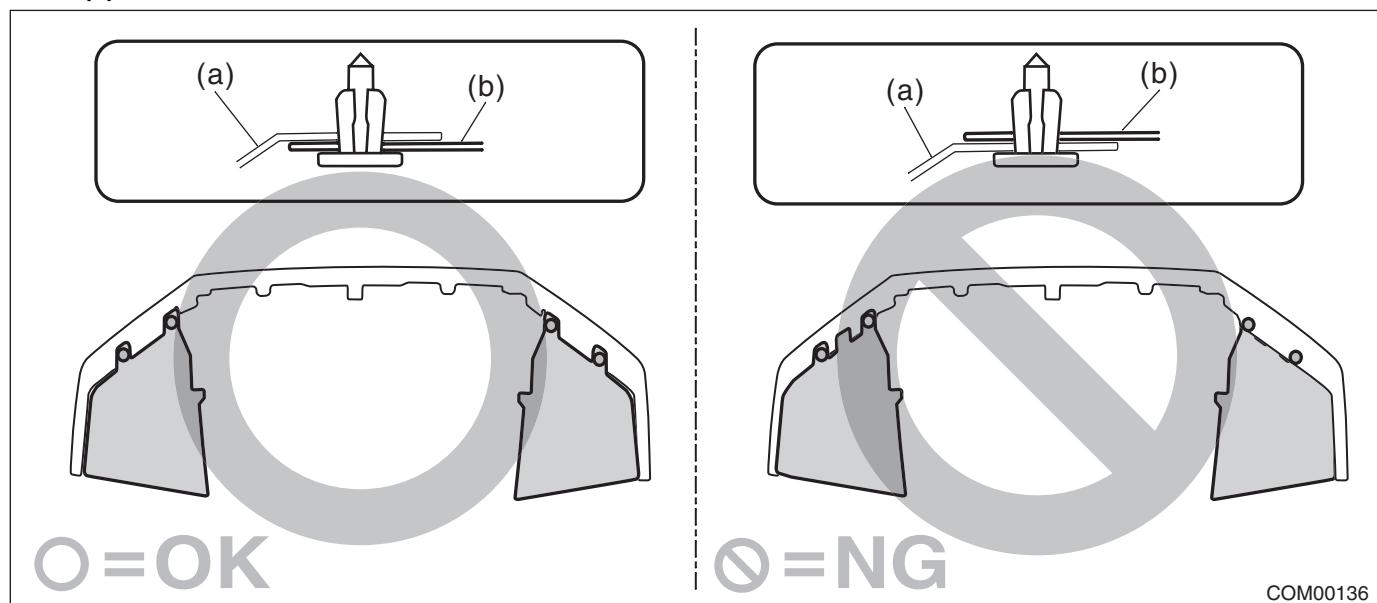

1) Install the turn signal light assembly - front.

### Tightening torque:

**7.5 N·m (0.8 kgf·m, 5.5 ft-lb)**

2) Install the mud guard - front.

3) Lower the vehicle.

4) Install the cover - fog light.

5) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

### NOTE:


For models other than STI model, connect the ground terminal to battery sensor.

## C: DISASSEMBLY

**CAUTION:**

**Use a dry clean cloth so that no grease or water adheres to the glass portion of the bulb.**

Rotate the bulb socket in the direction of arrow shown in the figure to remove the front turn signal light bulb.

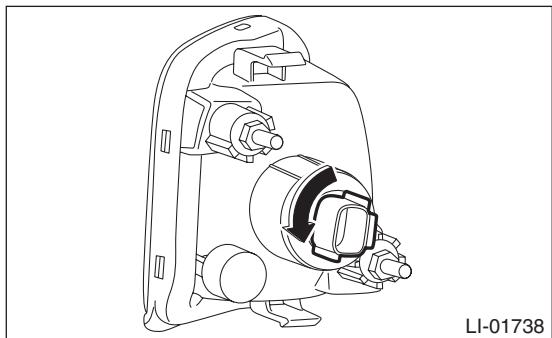

## D: ASSEMBLY

**CAUTION:**

**Use a dry clean cloth so that no grease or water adheres to the glass portion of the bulb.**

- 1) Install the front turn signal light bulb.
- 2) Install the bulb socket.