

20. Clearance/Parking Light Bulb

A: REMOVAL

NOTE:


Since the LED type is a non-disassembled part, it cannot be removed.

- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, disconnect the ground terminal from battery sensor.

- 2) Turn the steering wheel in the opposite direction from the parts to be removed. Then remove the clips and turn over the mud guard - front.

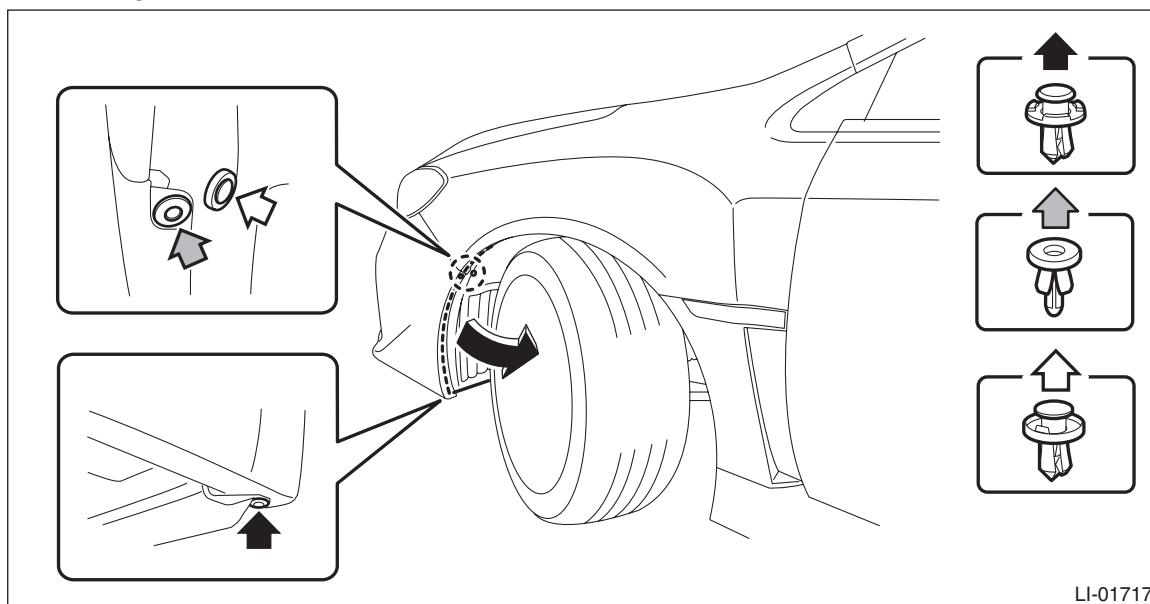

- 3) Remove the parking light bulb. <Ref. to LI-25, PARKING LIGHT BULB, DISASSEMBLY, Headlight Assembly.>

B: INSTALLATION

- 1) Install the parking light bulb. <Ref. to LI-26, PARKING LIGHT BULB, ASSEMBLY, Headlight Assembly.>
- 2) Install the mud guard - front.
- 3) Connect the battery ground terminal. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For models other than STI model, connect the ground terminal to battery sensor.